

# Electronic Flow Meter for Water

## Aqua Eye

### INSTRUCTION MANUAL

MNT40351 22.03



Please keep this instruction manual in a place where you can take it out and refer to it as soon as it is needed. Also, when reselling or transferring this product, please also attach this instruction manual to the product.

For inquiries about this flow meter and ordering parts, be sure to inform us of the model number and the serial number displayed on the name plate.

# Contents

1	Introduction	1-1
2	Handling precautions	2-1
2.1	Matters to be checked about type and specifications	2-1
2.2	Precautions regarding measured liquid	2-1
2.3	Precautions regarding place of installation	2-2
2.4	Precautions regarding piping	2-2
2.5	Precautions regarding control system	2-2
2.6	Precautions regarding Maintenance & inspection	2-3
2.7	Precautions regarding use for high-pressure gas liquid or inflammable gas liquid	2-3
2.8	Precautions regarding transportation & storage	2-3
2.9	Precautions regarding battery life	2-3
2.10	Precaution regarding batch	2-4
3	Outline of the product	3-1
3.1	Standard specifications	3-1
3.1.1	Measuring unit	3-1
3.1.2	Counting unit	3-1
3.1.3	Flow range	3-2
3.2	Type and specification code	3-3
3.3	External dimension drawing (Unit: mm)	3-4
(1)	Field indication type	3-4
(2)	Pulse, & alarm output, and analog output type	3-4
(3)	Field indication type (for high temperature specification)	3-4
(4)	Pulse, & alarm output, and analog output type (for high temperature specification)	3-4
(5)	Batch type	3-5
4	Installation	4-1
4.1	Piping design	4-1
4.2	Mounting	4-1
4.2.1	Mounting precautions	4-1
4.2.2	Precautions regarding the piping	4-1
4.2.3	Checking adjacent pipe	4-2
4.2.4	Precautions regarding execution of heat preservation work	4-2
4.2.5	Precautions regarding outdoor installation	4-2
4.2.6	Change of reading direction	4-3
5	Wiring and setting of printed circuit board	5-1
5.1	Output printed circuit board	5-1
5.1.1	Pulse & alarm output type	5-1
(1)	Output printed circuit board	5-1
(2)	Contents of setting	5-1
5.1.2	Analog output type	5-2
(1)	Output printed circuit board	5-2
5.1.3	Batch type	5-3

(1) Output printed circuit board	5-3
(2) Contents of setting	5-3
(3) Batch printed circuit board	5-4
5.2 Precautions regarding wiring	5-5
5.3 Power line and signal I/O line	5-5
5.3.1 Pulse & alarm output type, analog output type	5-5
5.3.2 Batch type	5-5
5.4 Termination of cable	5-5
5.5 Wiring port	5-5
5.6 Earth Ground terminal	5-5
5.7 Connection	5-6
5.7.1 Connection of pulse & alarm output type	5-6
(1) Voltage no-contact output	5-6
(2) Open collector output	5-6
5.7.2 Connection of analog output type	5-6
5.7.3 Connection of batch type	5-7
5.7.3.1 Connection of pulse & alarm output unit	5-7
(1) Voltage no-contact output	5-7
(2) Open collector output	5-7
5.7.3.2 Wiring of power supply & measuring signal unit	5-7
(1) AC specification	5-7
(2) 24VDC specification	5-7
6 Basic operations	6-1
6.1 Field indication type, Pulse & alarm output type, Analog output type	6-1
6.1.1 Liquid crystal display / component and function of buttons	6-1
6.1.2 Switching of Integrated flow value and Momentary flow rate display	6-2
6.2 Batch type	6-3
6.2.1 Liquid crystal display / component and function of buttons	6-3
6.2.2 Integrated flow value (non-resettable), batch volume, momentary flow rate	6-4
6.2.3 Change of batch amount	6-5
6.2.4 Actions	6-6
6.2.5 Operation	6-7
7 Data setting method	7-1
7.1 List of set items	7-1
7.2 Liquid crystal display / component and function of buttons	7-2
7.3 Operating method in setting mode	7-3
7.3.1 How to start & end setting mode	7-3
7.3.2 How to move set item	7-4
7.4 Data setting examples	7-5
7.4.1 Setting integration unit	7-5
7.4.2 Setting momentary flow rate unit	7-6
7.4.3 Setting upper limit alarm value (or lower limit alarm value)	7-8
7.4.4 Setting 0 ~ 100% span (analog output span)	7-10
7.4.5 Setting the contents of SIG1 (SIG2) output	7-11

7.5	Other functions and operations	7-12
(1)	Changing the pulse unit of unit pulse	7-12
(2)	Changing the time of hibernation mode	7-13
(3)	Changing the low cutoff	7-14
(4)	Changing the momentary flow rate indication updating time	7-15
(5)	Changing the alarm indication (output) updating time	7-16
(6)	To write the setting contents to FLASH	7-17
(7)	To read the contents of setting from FLASH	7-19
7.6	Function and operation of batch type	7-20
(1)	To use simplified batch function	7-20
(2)	Changing the reset system	7-21
(3)	Changing the counting system	7-22
(4)	Setting the overshoot amount correcting value	7-23
7.7	Factory setting	7-24
7.8	Setting for use	7-29
8	Operation	8-1
8.1	Treatment before flowing of liquid	8-1
8.1.1	Checking after piping installation & wiring	8-1
8.1.2	Flushing	8-1
8.2	Precautions to take before start of operation	8-1
8.3	Operating precautions	8-1
8.3.1	Working flow rate	8-1
8.3.2	Precautions regarding use of high-temperature liquid	8-1
9	Maintenance	9-1
9.1	Measuring section disassembling procedure	9-1
9.2	Simulated output	9-2
9.3	Battery replacing procedure	9-5
9.4	Counting unit resetting procedure	9-6
9.5	Analog output adjusting procedure	9-7
9.6	Pulse width changing procedure	9-8
9.7	Batch type	9-11
9.7.1	Fuse replacing procedure	9-11
9.7.2	Relay replacing procedure	9-12
9.8	Disassembly drawing	9-13
10	Troubleshooting	10-1
10.1	Troubleshooting	10-1
(1)	Disagreement between actual flow rate and indicated value of integration on flow meter	10-1
(2)	Disagreement between integrated value on flow meter and output pulse number on flow meter	10-1
(3)	No change from "0" if momentary flow rate indicated on flow meter even with flowing of liquid	10-2
(4)	No signal output from flow meter	10-2
(5)	Integrated volume agrees, but no agreement of momentary flow rate	10-3
(6)	Disagreement between flow rate and analog output	10-3
10.2	Confirmation items at inquiry	10-4
10.3	Special display screen list	10-5

DATA A: PARAMETER LIST ..... Data A

DATA B: SEGMENT CHARACTERS CORRESPONDENCE LIST ..... Data B

# 1. Introduction

Thank you for adopting Flow Meter of our make this time.

Before using your instrument, please read carefully this instruction manual which explains specifications, type, installation, etc. of the instrument.

Please note in advance that there may be cases where no revision of this manual is made even for any change in specifications, construction and component parts which is considered as not putting any obstacle from the viewpoints of function and performance.

In case the instrument failed to make normal operation, please inform us of the type and serial No. of the instrument concerned, the contents of trouble, circumstance in which the failure took place, etc. concretely, preferably with presentation of relative sketch, data, etc.

It is to be noted, however, that we cannot assume responsibility for any failure by the instrument of discharging the prescribed functions after a repair made by the user himself regardless of our position.

For any inquiry about troubles, the user is kindly requested to contact our agent from whom you purchased the product or the nearest branch office of our company.



Any unauthorized modification, etc. of this product made by the user presents a risk of spoiling the guarantee of safety or the prescribed function of the product. In case there is any need of modification, etc., the user is kindly requested to inform the dealer from whom you purchased the product or our branch office closest to you of the matter.

## **In this document, the following symbol marks are used for safe and correct use of the flow meter**



: Indicates a general handling precaution.



**Warning**

: Indicates contents the neglect of which in the handling may eventually lead to death or serious injury.



**Caution**

: Indicates contents the neglect of which in the handling may eventually lead to injury or production of material damages.

## 2. Handling precautions



This instrument is inspected sufficiently in the factory before delivery. When received delivery of this instrument, check well the appearance of the instrument to make sure that there is no damage in it. In this section are described precautions necessary for the handling of the instrument.

Please read this section carefully before using the instrument. For other matters, refer to the relative sections as required. For any inquiry about troubles, please contact our agent from whom you purchased the product or the nearest branch office of our company.

### 2.1 Matters to be checked about type and specifications



#### Caution

#### Please check the type and specifications.

This flow meter is assembled and adjusted individually according to specifications for delivery. Check the name plate provided on the counting unit, etc. to make sure that the type and other specifications are conformable to your order.

[Name plate mounting position]



[Contents of indication on the name plate]



### 2.2 Precautions regarding measured liquid



#### Warning

#### Take care about the liquid to be measured.

If you use this flow meter for any liquid unfit for the material used for the instrument, it may cause injury or material damage with splashing of liquid leaking due to corrosion which develops from the inside of the instrument. Check the corrosion resistance of the material of this product and the liquid concerned.



#### Warning

#### Use in the range of working pressure and temperature.

If you use your flow meter at any higher pressure or temperature, it may cause breaking of flow meter body or measuring unit or injury or material damage with splashing of broken pieces or liquid.



#### Warning

#### Take protective measures against burning.

In the case of use of any high-temperature liquid (40°C or over), the body and the radiating fins may get very hot and cause burning. Be sure to take protective measures against burning in due consideration of heat radiation, heat preservation and maintenance & inspection.

### 2.3 Precautions regarding place of installation



#### Caution

#### **Avoid place with large temperature gradient or large temperature fluctuations.**

When the instrument is subject to radiant heat, etc., either take shielding measures or install in a way to secure sufficient ventilation.



#### Caution

#### **Avoid installing in any corrosive atmosphere.**

When using this instrument in a corrosive atmosphere, arrange to secure sufficient ventilation and take protective measures against penetration and accumulation of rain water in the conduit pipe.

### 2.4 Precautions regarding piping



#### Caution

#### **Provide a bypass piping.**

There is a risk of material damage with breaking of internal component parts of the flow meter due to flushing or exhaustion of air from inside the piping in the initial period of operation.

Please arrange by-pass piping, and start operation following to the "Precautions to take before start of operation".



#### Caution

#### **Install in a state free from any vibrations or displacement of piping.**

If you install the flow meter in a place subject to great vibrations or displacement of piping, it may cause injury or material damage with breaking of flow meter body or measuring unit or splashing of broken pieces or liquid.

Please install the flow meter where less vibration or where no-misaligned piping.



#### Caution

#### **Install piping at a position not subject to any impact pressure.**

If any valve instantly closing the piping is provided close to the flow meter in either the upstream or downstream side, it presents a risk of injury or material damage with breaking of flow meter body or measuring unit due to impact pressure by water hammer, etc

please Install the flow meter where no impact pressure.



#### Caution

#### **Provide a strainer also on the downstream side.**

In order to prevent the internal components of the flowmeter from being damaged and to prevent entry into the process liquid, install a strainer also on the downstream side as necessary.

There is a possibility of physical damage due to contamination into process liquid.

### 2.5 Precautions regarding control system



#### Warning

#### **Supplement a control output function other than the output of this product.**

There is a risk of loss of safety and/or process specifications due to operating error or interruption of the control signal.

When using this flow meter on an important process line, it is recommended to supplement another control function to the system so as to avoid danger or material damage due to operating error.



## 2.6 Precautions regarding Maintenance & inspection



### Warning

#### **Remove internal pressure and completely eliminate the residual liquid.**

If the liquid used is either toxic or corrosive, it may cause injury or material damage at the time of disassembling or inspection of the flow meter. Be sure to remove the internal pressure and remove the internal liquid before working.

## 2.7 Precautions regarding use for high-pressure gas liquid or inflammable gas liquid



### Warning

#### **Use flow meter approved for high-pressure gas or flow meter certified as product of explosion-proof type.**

For any high-pressure gas liquid or inflammable gas liquid, use flow meter approved for high-pressure gas or article certified as product of pressure resistant and explosion-proof structure, article certified as product of intrinsically safe construction, etc. If you use a model of general structure, it may cause explosion or fire, leading to injury or material damage.

## 2.8 Precautions regarding transportation & storage



#### **Pack the flow meter for the storage.**

The packing style for storage shall be the same as or close to the state in which the product was delivered from us.

Select a place satisfying the following conditions for the storage:

- Place protected against rain or water.
- Place subject to little vibrations or shocks.
- Place with following temperature & humidity conditions during storage:

Preferably a place with normal temperature & humidity.

Temperature : -10 ~ 60°C

Humidity : 5 ~ 80%RH (without dew condensation)



### Caution

#### **Clean well the flow meter.**

For storing your flow meter after use, clean well the inside of the liquid end and, after drying, put a cover on the entire instrument for the storage.

## 2.9 Precautions regarding battery life



### Caution

#### **Pay due attention to battery life.**

The service life of the battery is about 5 years. Replace the battery at an early time if a battery alarm is indicated or output.

## 2.10 Precaution regarding batch function



### Caution

#### **For the flow meter without batch function setting**

Electronic Flow Meter for Small Flow Rate "Nico Eye" (Type: NE3E) does not have batch function.

Please make sure to use setting Set item No. "d1 Simple batch" been "OFF".

## 3. Outline of the product

Electronic Flow Meter for Water Supply “Aqua Eye” is a flow meter realized by loading an electronic indicating & counting unit on the measuring unit of an impeller type flow meter.

### 3.1 Standard specifications

#### 3.1.1 Measuring unit

Nominal size symbol			025		040		050	
Volume symbol			A0	B0	A0	B0	A0	B0
Measured liquid			Water, hot water, etc.					
Nominal size			25A		40A		50A	
Liquid viscosity			1mPa·s or equivalent					
Liquid temperature			0~80℃（Up to 110℃ for high temperature specification）					
Liquid pressure			2.0MPa or less（By flange standards）					
Measuring accuracy			Within ±1.0%					
Standard connection			JIS10K, JIS20K FF, RF					JIS10K FF, RF JIS20K RF
Material	Material symbol	FB	Main body: FCD450, Head cover : SCS14, Inner structure:SCS13※1, Fan wheel:C5191P					
		F7	Main body: FCD450, Head cover : SCS14, Inner structure:SCS13※2, Fan wheel:SUS304					
		S7	Main body: SCS13, Head cover : SCS14, Inner structure:SCS13, Fan wheel:SUS304					
	Note: The nominal size & volume symbol 50B is manufactured only an article of symbol FB or F7. ※1 It is CAC406 in case of the nominal size and volume symbol 50B. ※2 It is SUS304 in case of the nominal size and volume symbol 50B.							
	FCD450 : Ductile cast iron, SCS13、SCS14 : Stainless steel casting, C5191P : Phosphor bronze, SUS304 : Stainless steel, CAC406 : Cast bronze							
Material & Permissible Pressure			Nominal Pressure	Flange standard	Material symbol	Permissible Pressure（Liquid Temp.~110℃）MPa		
			10K	JIS10K	FB/F7/S7	1.0		
			20K	JIS20K		2.5		

#### 3.1.2 Counting unit

Nominal size symbol		025		040		050	
Volume symbol		A0B0		A0B0		A0B0	
Kind of type		Field indication type, Pulse & alarm output type, Analog output type, Batch type (For AC or 24V DC)					
Indication	Display unit		Numerical indication : 7-segment LCD 5W x 10H, 8 digits, mode and alarm indication : LCD 2H				
	Article	Total Value	Total value : 8 digits "MODE1" For Field indication type, Pulse & alarm output type, and Analog output type For batch type				Resettable total value; 8 digits "MODE4" Batch counter; 6 digits "MODE4"
		Min. unit	0.1L~ 1m³			1L~ 1m³	
		Flow rate	Flow rate ( /h); 4 1/2 digits "MODE2", Flow rate ( /min); 4 1/2 digits "MODE3" Flow rate (%): 4 digits "MODE5"				
		Min. unit /h	1L/h~ 0.1m³/h			0.01m³/h~ 1m³/h	
		Min. unit /min	0.01L/min~ 1L/min			0.1L/min~ 0.01m³/min	
		Note 1: Either one of "/h" or "/min" can be indicated by setting					
		Alarm	Upper limit alarm "HIGH", Low er limit alarm "LOW", Battery alarm "BATT"※3				
	Note 2: Both total value and flow rate cannot be indicated simultaneously.						
	Note 3: Article can be changed by pressing the [MODE] button located on the front of the counting unit.						
Output	Field indication type	output	Without				
	Pulse & alarm output type	No. of output	2 points				
		Output assignment	To each of SIG1 and SIG2, one is selected and assigned from among the respective outputs of "Unit pulse", "Unitless pulse", "Upper limit alarm", "Low er limit alarm", "Upper and low er limit alarm" and "Battery alarm" ※3				
		Kind of signal	Voltage no-contact output or open collector output Voltage no-contact : Signal level H: Approx. equal to voltage of external pow er (at no load) (Approx. 24V DC for Batch type) L:0.5V or less (at no load) Output resistance : Approx. 2.3kΩ (short circuit protection resistance : Approx. 100Ω)				Open collector : Voltage & current : 27V DC, 30mA Voltage at ON : 0.5V or less
		Electronic logic	Positive or negative logic Positive logic : Logic 1 at H (Transistor : OFF) Negative logic : Logic 1 at L (Transistor : ON)				
		Unit pulse	0.1L/P~ 1m³/P			1L/P~ 1m³/P	
		Unitless pulse	13.6mL	26.2mL	29.7mL	79.5mL	113.3mL
		Pulse signal width	0.5~ 20ms or 5~ 200ms (STD:5ms)				

※3: "Battery alarm" is only for the flow meter with battery


Output	Analog output type	No. of output	1 point	
		Output assignment	Flow rate	
		Kind of signal	4 ~ 20mA DC	
		Conversion accuracy	±0.5% (Full scale)	
		Resolution	1/1000	
		Allowable load resistance	500Ω or less	
	Batch type	No. of output	4 points	
		Output assignment	SIG1, SIG2: To each of SIG1 and SIG2, one is selected and assigned from among the respective outputs of Unit pulse, Unitless pulse, Upper limit alarm, Lower limit alarm, and Upper and lower limit alarm. Control output: Metering signal 1, Metering signal 2	
		Kind of signal	Pulse output, alarm signal : Refer to kind of signal at article of pulse & alarm signal.	
			Control output : AC type	

### 3.1.3 Flow range (Unit: m³/h)

Nominal size & volume symbol	Flow range
025A0	0.5~ 2.5
025B0	1.0~ 5.0
040A0	1.5~ 7.0
040B0	3.0~15.0
050A0	3.0~15.0
050B0	6.0~25.0

Note: When selecting a model of flow meter, please select it so that normal flow range is 40~60% of its Max. flow.

## 3.2 Type and specification code

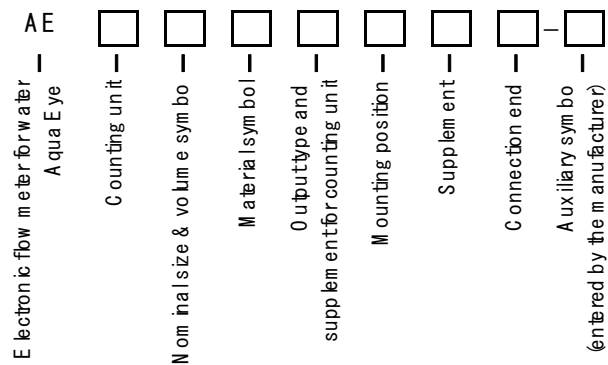

●: Standard; ○: Manufacturable; ×: Unavailable

Type	Specification code	Specification	025A0	025B0	040A0	040B0	050A0	050B0
AE		Electronic flow meter for water Aqua Eye	●	●	●	●	●	●
Counting unit	3E	Electronic indication	●	●	●	●	●	●
Nominal size & volume symbol	025A0	Nominal size: 25A Max flow rate: 2.5m <sup>3</sup> /h	●					
	025B0	Nominal size: 25A Max flow rate: 5.0m <sup>3</sup> /h		●				
	040A0	Nominal size: 40A Max flow rate: 7.0m <sup>3</sup> /h			●			
	040B0	Nominal size: 40A Max flow rate: 15m <sup>3</sup> /h				●		
	050A0	Nominal size: 50A Max flow rate: 15m <sup>3</sup> /h					●	
	050B0	Nominal size: 50A Max flow rate: 25m <sup>3</sup> /h ※7						●
Material symbol	FB	Body: FCD450, Inner structure: SCS13 ※8, Fan wheel: C5191P	●	●	●	●	●	●
	F7	Body: FCD450, Inner structure: SCS13 ※9, Fan wheel: SUS304	○	○	○	○	○	○
	S7	Body: SCS13, Inner structure: SCS13, Fan wheel: SUS304	○	○	○	○	○	×
Output type and supplement for counting unit	1234	Field indication type (without output signal)	●	●	●	●	●	●
	P034	Pulse & alarm output ※10	●	●	●	●	●	●
	P00B		○	○	○	○	○	○
	A034	Analog output	●	●	●	●	●	●
	A00B		○	○	○	○	○	○
	PB34	Batch: AC ※10	●	●	●	●	●	●
	PC34	Batch: 24V DC ※10	●	●	●	●	●	●
Mounting position	H	Horizontal piping horizontal installation	●	●	●	●	●	●
	V	Horizontal piping vertical installation or vertical piping	○	○	○	○	○	○
Supplement	0	Max. temperature 80°C	●	●	●	●	●	●
	1	Max temperature 110°C (High temp. type) or in case of batch type	○	○	○	○	○	○
Connection end	010F	JIS10K FF Flange	●	●	●	●	●	●
	010R	JIS10K RF Flange	○	○	○	○	○	○
	020F	JIS20K FF Flange	○	○	○	○	○	×
	020R	JIS20K RF Flange	○	○	○	○	○	○

※7 : The nominal size & volume symbol 50B is manufactured only a material symbol FB or F7.

※8 : The nominal size & volume symbol 50B is manufactured inner structure by CAC406.


※9 : The nominal size & volume symbol 50B is manufactured inner structure by SUS304.

※10 : SIG1 and SIG2 output of standard article are delivered with the following setting.


SIG1 output : Kind of signal	Voltage no-contact
Electronic logic	Positive logic
Pulse output	Unitless pulse output
SIG2 output : Kind of signal	Voltage no-contact
Electronic logic	Positive logic
Pulse output	Unit pulse output

### 3.3 External dimension drawing (Unit: mm)

(1) Field indication type

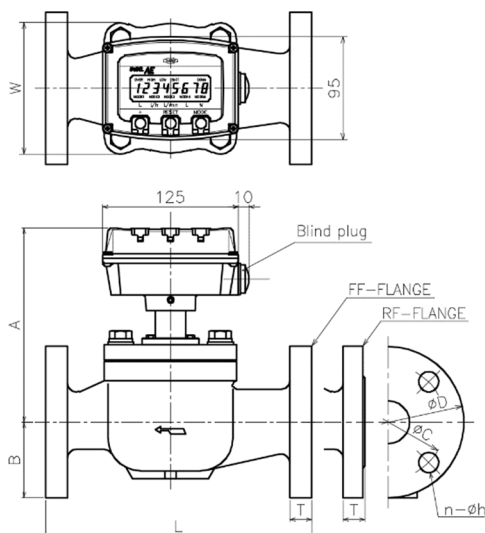


(2) Pulse, & alarm output, and analog output type

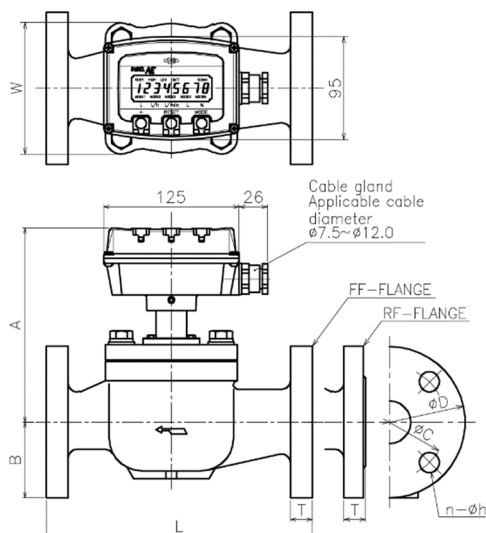


Nominal size & volume symbol	Nominal size	Flange standard	L	A	B	W	D	T		C	n	h	Weight (kg)
								FCD	SCS				
025A0 025B0	25A	JIS10K	225	170	62.5	98	125	20	16	90	4	19	8.5
040A0 040B0	40A	JIS10K	245	179	70	122	140	20	18	105	4	19	11.6
050A0	50A	JIS10K	245	179	77.5	122	155	20	18	120	4	19	13.3
050B0※	50A	JIS10K	250	182.5	77.5	122	155	20	—	120	4	19	14.4

※The nominal size & volume symbol 50B is manufactured only material symbol FB or F7.  
This table of weight indicates the case of material symbol FB.

(3) Field indication type  
(for high temperature specification)

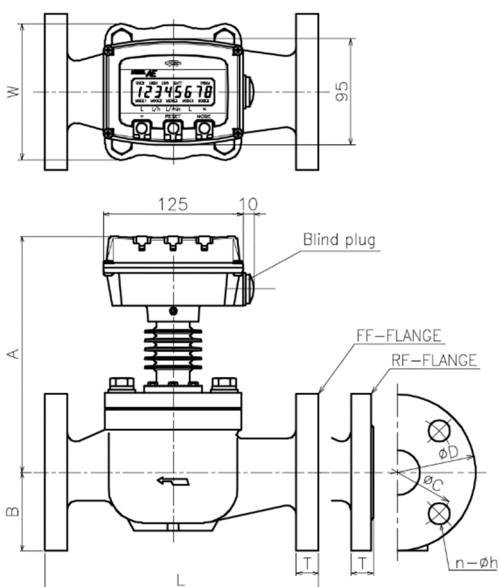


(4) Pulse, & alarm output, and analog output type  
(for high temperature specification)

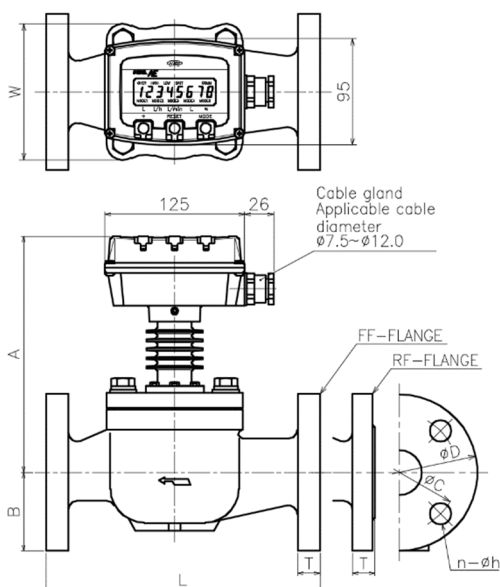

Nominal size & volume symbol	Nominal size	Flange standard	L	A	B	W	D	T		C	n	h	Weight (kg)
								FCD	SCS				
025A0 025B0	25A	JIS10K	225	202	62.5	98	125	20	16	90	4	19	8.9
040A0 040B0	40A	JIS10K	245	211	70	122	140	20	18	105	4	19	12.0
050A0	50A	JIS10K	245	211	77.5	122	155	20	18	120	4	19	13.7
050B0※	50A	JIS10K	250	214.5	77.5	122	155	20	—	120	4	19	14.8

※The nominal size & volume symbol 50B is manufactured only material symbol FB or F7.  
This table of weight indicates the case of material symbol FB.

# (5)Batch type

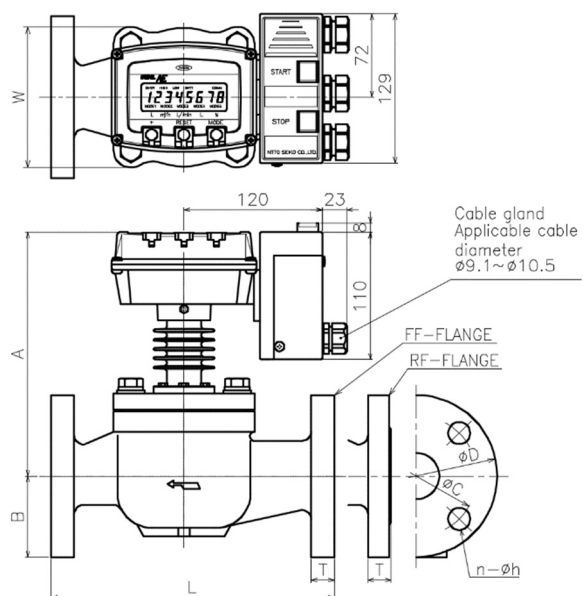

Nominal size & volume symbol	Nominal size	Flange standard	L	A	B	W	D	T		C	n	h	Weight (kg)
								FCD	SCS				
025A0 025B0	25A	JIS10K	225	202	62.5	98	125	20	16	90	4	19	9.5
040A0 040B0	40A	JIS10K	245	211	70	122	140	20	18	105	4	19	12.6
050A0	50A	JIS10K	245	211	77.5	122	155	20	18	120	4	19	14.3
050B0※	50A	JIS10K	250	214.5	77.5	122	155	20	—	120	4	19	15.4

※The nominal size & volume symbol 50B is manufactured only material symbol FB or F7.  
This table of weight indicates the case of material symbol FB.

## **4. Installation**

### **4.1 Piping design**

Take account of the following points in the piping design to enable correct measurement:

- (1) Place of mounting
  - Place easy for inspection.
  - Place protected against direct sunshine.
  - Place not subject to rain or dew drops.
  - Place with little corrosive gas.
  - Place with little dust.
  - Place with little electromagnetic noise.
  - Place with little vibrations of piping and fluid.
- (2) Prevention of noise

Select a place not close to any power source such as motor, transformer, etc. as it may cause noise interference to the flow meter.
- (3) Service area

A service area is required for such works as mounting, wiring, inspection, etc. Select a place where a sufficient space can be secured for it.
- (4) Mounting posture

Perform piping design so that the liquid may always be filled with inside the measuring unit of the flow meter.

### **4.2 Mounting**

#### **4.2.1 Mounting precautions**

- (1) The flow meter is firmly packed. Take good care not to damage the equipment at the time of unpacking. Moreover, to prevent damage due to accident during transportation to the place of installation, carry near the place of installation in the state packed as it was delivered.
- (2) Take care not to drop or add any excessive impact.
- (3) Make the flow direction of measured liquid being match to arrow mark on the measuring part of flow meter. When installing on a vertical piping, mount in such a way that the fluid flows from bottom to up as much as possible.
- (4) It is undesirable to leave the flow meter in the state of non use for a long time after installation. Take the following protective measures when you leave it out of use for some inevitable reason:
  - \* Check sealed state of equipment.  
Make sure that the screws of counting unit case, wire connecting port, etc. are sealed completely.
  - \* Perform periodical inspection.  
Inspect the above items and the state inside the counting unit case at least once a year. Moreover, inspect at any occasion when there is any fear of penetration of water in the flow meter because of rainfall, etc.
- (5) Tighten the flange bolts evenly.

#### **4.2.2 Precautions regarding the piping**

- (1) Be sure to install the strainer on the inlet side of the Electronic Positive Displacement Flow Meter "Flow Eye" (Type: FE3E), Electronic Flow Meter for Small Flow Rate "Nico Eye" (NE3E), and Electronic Flow Meter for Small Flow Rate "Oil Eye" (Type OE3E).  
Standard mesh of filter are as below.

Flow Eye and Oil Eye	:60 mesh
Nico Eye	:200 mesh.



Electronic Flow Meter for Water Supply "Aqua Eye" has built-in strainer. To avoid inflow and mixing of broken pieces of internal component parts, install a strainer also on the outlet side of any flow meter as required.

- (2) The flow meter shall be installed on the outlet side of the pump. When using with a tank head, provide a head (pressure) larger than the sum of the pressure loss of strainer and that of flow meter.
- (3) Install a bypass piping. Piping is taken account of the measuring part protection from flushing at initial operation or air discharge as well as be taken account of inspection and maintenance.
- (4) Perform piping installation by securing necessary space for inspection, disassembling, etc. of the flow meter. Especially, secure a space for enabling disassembling of the measuring unit of the flow meter.
- (5) To avoid giving piping stress to the flow meter, install in a way not to be deviated from the center of the piping.
- (6) When using liquid packing and seal tape, etc. at the time of piping installation, take good care to prevent the tape, etc. from protruding into the piping.
- (7) In the case where the pump is of plunger type or diaphragm type and that the suction side is engine cylinder, pulsating flow is produced in the liquid, causing damage to the rotor or instrumental error. At that time, eliminate the pulsating flow completely by installing an air chamber or accumulator on the pump producing the pulsating flow or on the engine cylinder side.

#### **4.2.3 Checking adjacent pipe**

- (1) In case the piping is either inclined or eccentric or if the face-to-face dimension is out of the tolerance value, be sure to correct the irregularity before installing the flow meter.
- (2) Foreign matters such as weld refuse or wood chip, etc. may be sometimes found in newly installed pipeline. Remove foreign matters by flushing, etc. before installing the flow meter.

#### **4.2.4 Precautions regarding execution of heat preservation work**



For any liquid of properties freezing or solidifying in the piping or liquid of specifications requiring heat preservation, execute heat insulation work for the flow meter, strainer and piping.

- (1) Before executing the heat insulation work, check for any leakage of liquid.
- (2) For the flow meter and strainer, execute heat insulation by a method enabling easy maintenance, inspection and disassembling. Moreover, take care not to spoil the safety of handling by hiding specifications and precautions of the flow meter such as name plate, caution plate with the work.
- (3) Avoid performing heat preservation for the counting unit.

#### **4.2.5 Precautions regarding outdoor installation**

The ambient temperature of the counting unit is -10 ~ 60°C. In a place exposed to rain water or direct sunshine, provide a guard such as rain protector or shade, etc. on the counting unit. Especially for use in a place where salt damage is expected, take protective measures against salt damage.

#### 4.2.6 Change of reading direction

Please loosen the hexagonal socket head bolt (M4 × 0.7) on the side of the counting part by rotating it more than 3 times with a hexagonal wrench (width across flat : 3 mm ). Next, turn the counting part in an arbitrary direction. Then fasten the counting part by tightening the hexagon socket head bolt.



## 5. Wiring and setting of printed circuit board

Connect the external signal wire of the flow meter to the terminal block inside the counting unit.



The output printed circuit board varies depending on the type of counting unit and the wiring is also variable.

### 5.1 Output printed circuit board

#### 5.1.1 Pulse & alarm output type

##### (1) Output printed circuit board

When remove the screw at 4 corners of the counting unit and open it, the output printed circuit board appears under the battery.

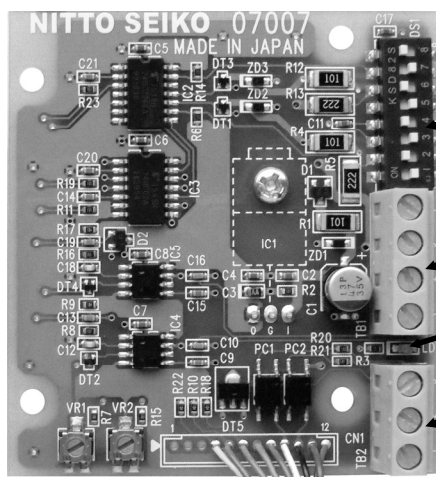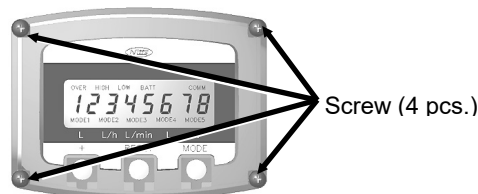

① Signal type setting switch

② Terminal block for connecting pulse & alarm output

③ External power supply LED

④ Terminal block for connecting to printed circuit board for batch

##### ① Signal type setting switch (DS1)

Sets the signal type of SIG1, SIG2 and the range of VR1, VR2.

##### ③ External power supply LED (LD1)

Lights when external power is supplied.

##### ② Terminal block for connecting pulse & alarm output (TB1)

This is a terminal block for connecting external power supply, SIG1 signal and SIG2 signal.

##### ④ Terminal block for connecting to printed circuit board for batch (TB2)

This is a terminal block for connecting to printed circuit board for batch.

##### (2) Contents of setting

###### ● Type of signal of SIG1

Contents of setting of DS1	Type of signal (Electronic logic)
ON <input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3	Voltage no-contact (Positive logic)
ON <input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3	Voltage no-contact (Negative logic)
ON <input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3	Open collector (Positive logic)
ON <input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3	Open collector (Negative logic)



###### ● Type of signal of SIG2

Contents of setting of DS1	Type of signal (Electronic logic)
ON <input type="checkbox"/> 5 <input type="checkbox"/> 6 <input type="checkbox"/> 7	Voltage no-contact (Positive logic)
ON <input type="checkbox"/> 5 <input type="checkbox"/> 6 <input type="checkbox"/> 7	Voltage no-contact (Negative logic)
ON <input type="checkbox"/> 5 <input type="checkbox"/> 6 <input type="checkbox"/> 7	Open collector (Positive logic)
ON <input type="checkbox"/> 5 <input type="checkbox"/> 6 <input type="checkbox"/> 7	Open collector (Negative logic)

### 5.1.2 Analog output type

#### (1) Output printed circuit board

When remove the screw at 4 corners of the counting unit and open it, the output printed circuit board appears under the battery.

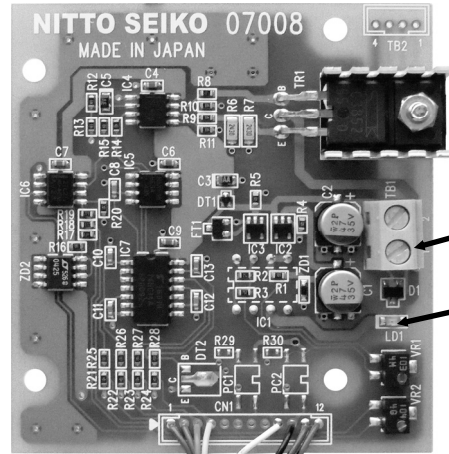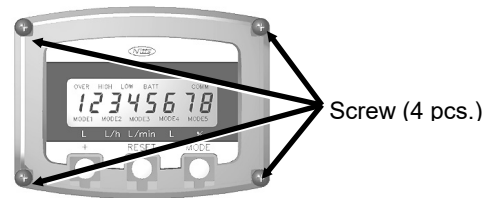

① Terminal block for connecting analog output

② External power supply LED

#### ① Terminal block for connecting analog output (TB1)

This is a terminal block for connecting external power supply and analog signal.

#### ② External power supply LED (LD1)



Lights when external supply is supplied.

### 5.1.3 Batch type

 Electronic Flow Meter for Small Flow Rate "Nico Eye" (Type: NE3E) does not have batch type.

#### (1) Output printed circuit board

When remove the screw at 4 corners of the counting unit and open it, the output printed circuit board appears.

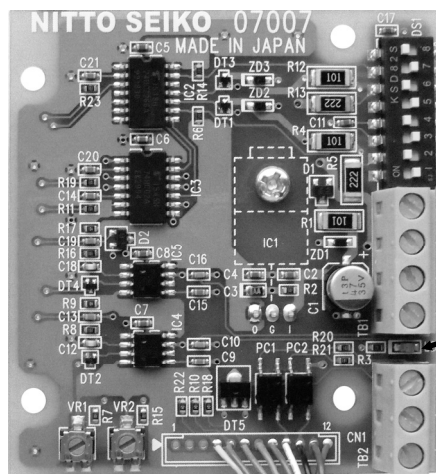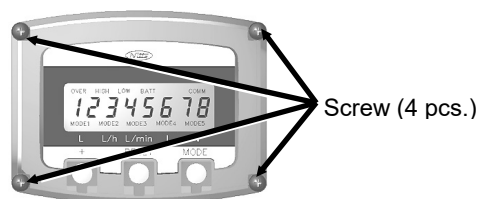

① Signal type setting switch

② Terminal block for connecting pulse & alarm out put

③ External power supply LED

④ Terminal block for connecting to printed circuit board for batch

#### ① Signal type setting switch (DS1)

Sets the signal type of SIG1, SIG2 and the range of VR1, VR2.

#### ③ External power supply LED (LD1)

Lights when external power is supplied.

#### ② Terminal block for connecting pulse & alarm out put (TB1)





This is a terminal block for connecting external power supply, sig1 signal and sig2 signal. In case of batch type it is connected to printed circuit board for batch.

#### ④ Terminal block for connecting to printed circuit board for batch (TB2)





This is a terminal block for connecting to printed circuit board for batch.

#### (2) Contents of setting

##### ● Type of signal of SIG1



Contents of setting of DS1	Type of signal (Electronic logic)
ON 	Voltage no-contact (Positive logic)
ON 	Voltage no-contact (Negative logic)
ON 	Open collector (Positive logic)
ON 	Open collector (Negative logic)

##### ● Type of signal of SIG2

Contents of setting of DS1	Type of signal (Electronic logic)
ON 	Voltage no-contact (Positive logic)
ON 	Voltage no-contact (Negative logic)
ON 	Open collector (Positive logic)
ON 	Open collector (Negative logic)

### (3) Batch printed circuit board

When remove the screw on the lateral face of the counting unit and open the lid, the batch printed circuit board appears.

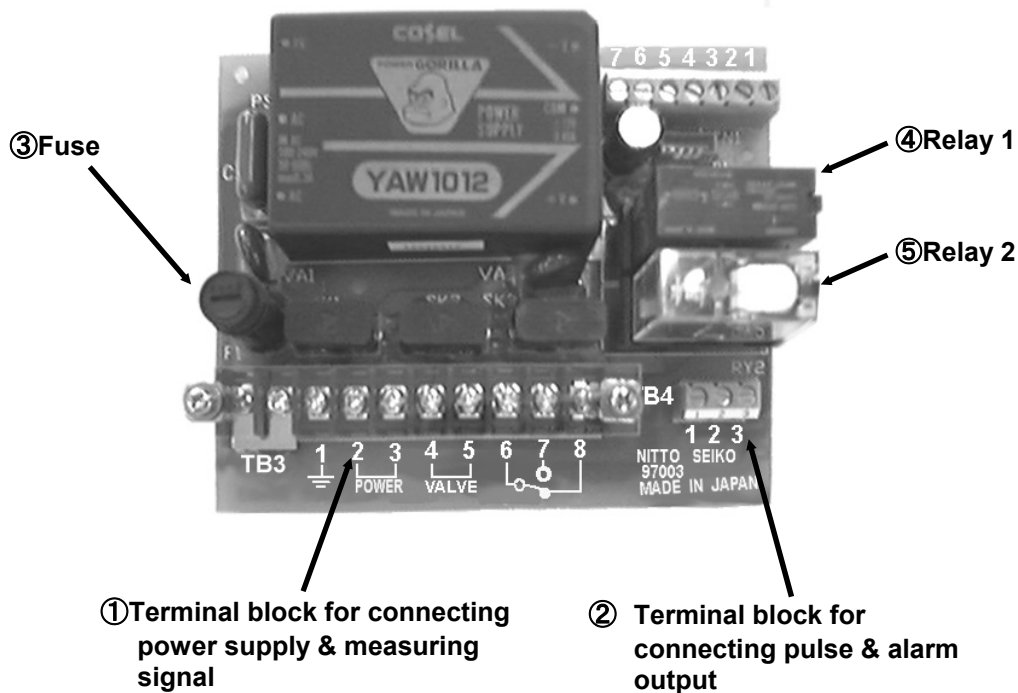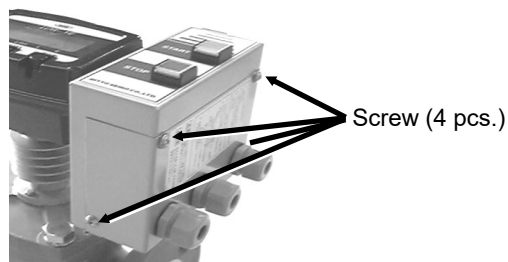

**Note) The photo shows a unit of AC specification.**

- ① **Terminal block for connecting power supply & measuring signal (TB3)**  
This is a terminal block for connecting power supply & measuring signal.

- ② **Terminal block for connecting pulse & alarm output (TB4)**  
This is a terminal block for connecting SIG1 and SIG2 signals.

- ③ **Fuse (F)**  
This is a fuse for power supply.

- ④ **Relay 1 (RY1)**  
This is a relay for the measuring signal 1.

- ⑤ **Relay 2 (RY2)**  
This is a relay for the measuring signal 2.

## 5.2 Precautions regarding wiring

Take the following precautions for the wiring:

- (1) Be sure to cut off external power supply before executing the wiring work.
- (2) To secure insulation and prevent trouble due to dew condensation inside the counting unit, avoid connecting cables outdoors on rainy day.
- (3) Remove the covering of the wire by 6 mm at the terminal and connect securely. However, please use crimp type terminal for the earth ground, the power supply, and the measuring signal for batch type.
- (4) Conduit wiring is recommended for the wiring. For conduit wiring of pulse & alarm output type and analog output type, use thick steel pipe 16 (JIS C 8305) . (The cable gland for batch type is not adapted to conduit wiring.)
- (5) For the wiring at the wiring port of the counting unit, keep waterproofing by sufficiently tightening the gland nut.

## 5.3 Power line and signal I/O line

### 5.3.1 Pulse & alarm output type, analog output type

Cable	:	Use shielded cable.		
Cable specifications	:	Finished outside diameter	7.5 ~ 12.0 mm	
		Nominal sectional area	Stranded wire	: 0.5 ~ 1.5 mm <sup>2</sup>
		or diameter	Simple wire	: 0.9 ~ 1.5 mm

### 5.3.2 Batch type

#### · Pulse & alarm output part

Cable	:	Use shielded cable.		
Cable specifications	:	Finished outside diameter	9.1 ~ 10.5 mm	
		Nominal sectional area	Stranded wire	: 0.5 ~ 1.5 mm <sup>2</sup>
		or diameter	Simple wire	: 0.9 ~ 1.5 mm

#### · Earth ground, power supply, measuring signal part

Cable	:	Use shielded cable.		
Cable specifications	:	Finished outside diameter	9.1 ~ 10.5 mm	
		Nominal sectional area	Stranded wire	: 1.25 ~ 2.0 mm <sup>2</sup>

## 5.4 Termination of cable

In the termination of cable, take care so that the portion deprived of outer sheath does not reach the packing seal.

## 5.5 Wiring port

This instrument is provided with a cable gland at the wiring port. To avoid trouble due to unexpected penetration of water, be sure to use the attached cable gland for the signal wiring port.

The pulse & alarm output type and the analog output type have a waterproof construction stipulated in JIS C 0920-1993 "Waterproofing Tests of Electric Machinery & Equipment and protection grade against penetration of solid matters".

## 5.6 Earth ground terminal

Earth ground terminal is provided on the right figure inside the counting part case. (Screw M3)

Earth ground terminal



For the batch type ground connection, use the ground terminal of the Terminal block (TB3) of the batch printed circuit board.



### Caution

At the time of wiring, make sure that following items are provided in the cable gland without fail.

Pulse & alarm output type, analog output type : Washer, packing

Batch type : Packing



### Caution


When performing conduit wiring, attach a cable gland to the wire connecting port and incline the conduit piping to prevent water from flowing into the wiring port through the conduit. Moreover, provide a drain valve at the rise part of the conduit piping and discharge drain regularly.

## 5.7 Connection

### 5.7.1 Connection of pulse & alarm output type


#### (1) Voltage no-contact output

Perform wiring by paying attention to voltage and polarity.

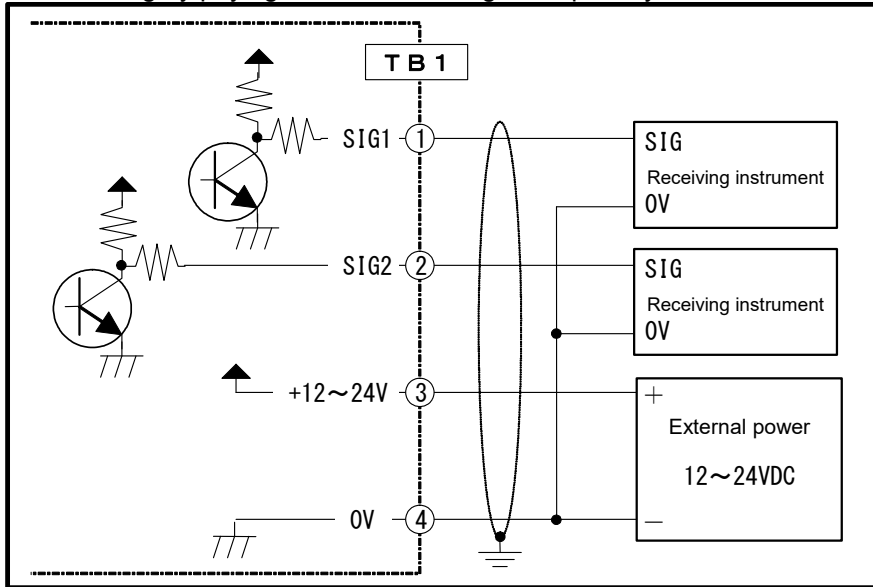


#### (2) Open collector output

Perform wiring by paying attention to voltage and polarity.

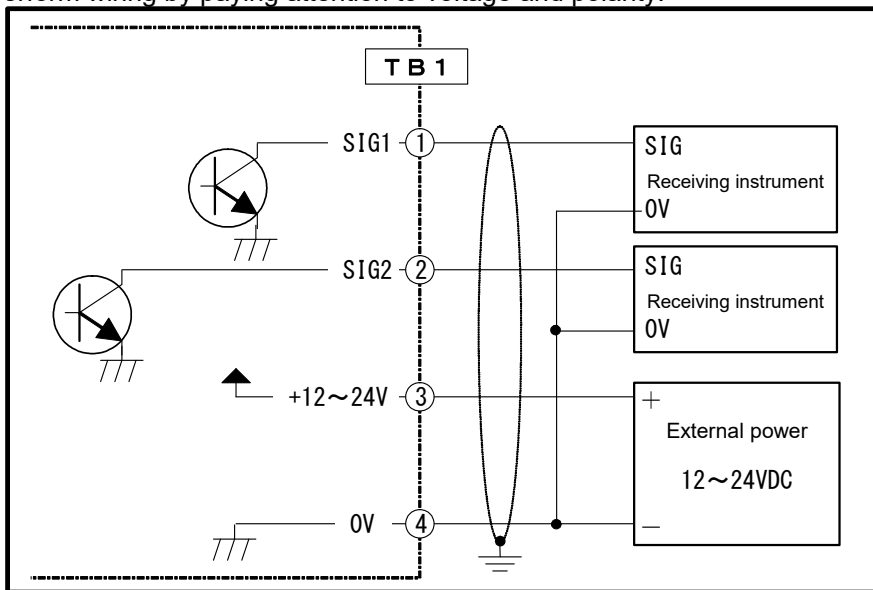

### 5.7.2 Connection of analog output type

Perform wiring by paying attention to voltage and polarity.

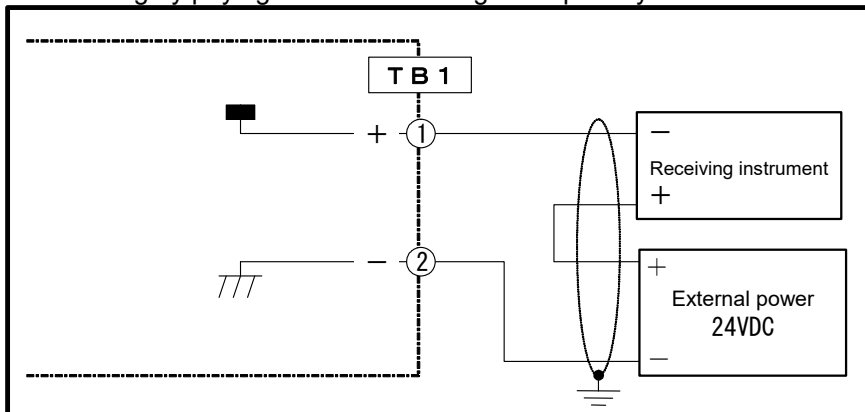




### 5.7.3 Connection of batch type

#### 5.7.3.1 Connection of pulse & alarm output unit


##### (1) Voltage no-contact output

Perform wiring by paying attention to voltage and polarity.

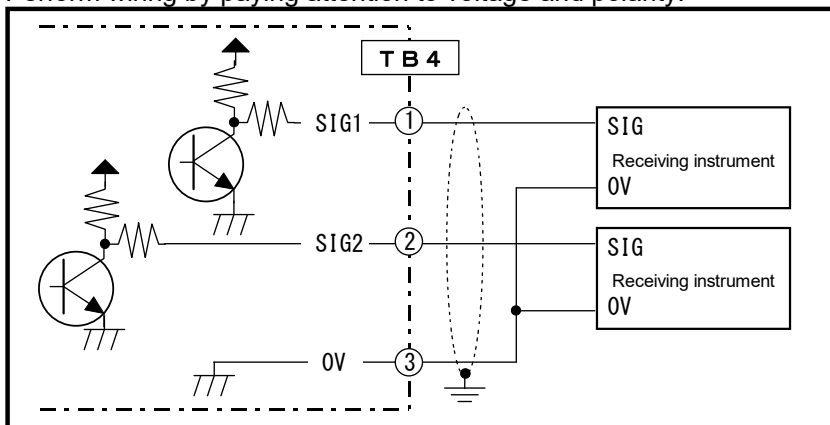

##### (2) Open collector output


Perform wiring by paying attention to voltage and polarity.

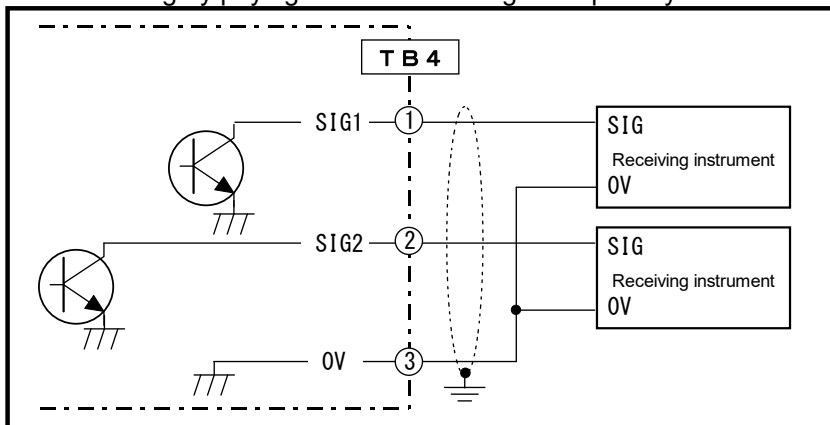

#### 5.7.3.2 Wiring of power supply & measuring signal unit


##### (1) AC specification

Perform wiring by paying attention to voltage.

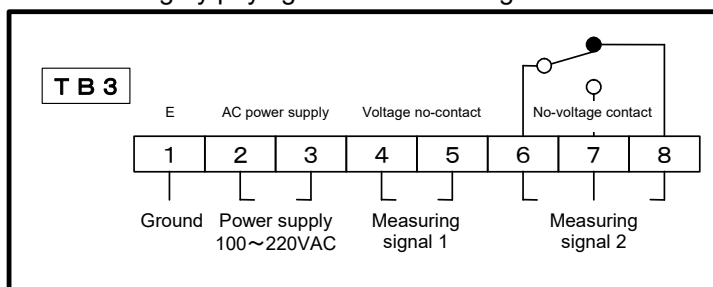

##### (2) 24V DC specification


Perform wiring by paying attention to voltage and polarity.

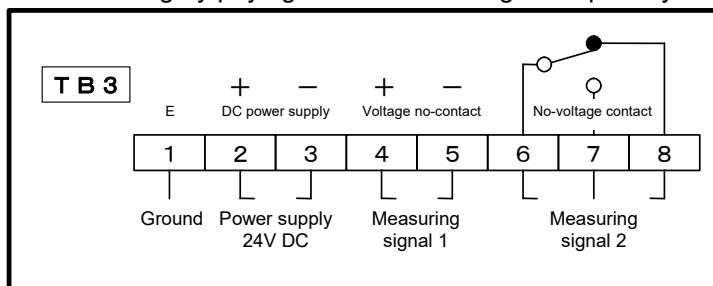

## 6. Basic operations

### 6.1 Field indication type, Pulse & alarm output type, and Analog output type

#### 6.1.1 Liquid crystal display / component and function of buttons

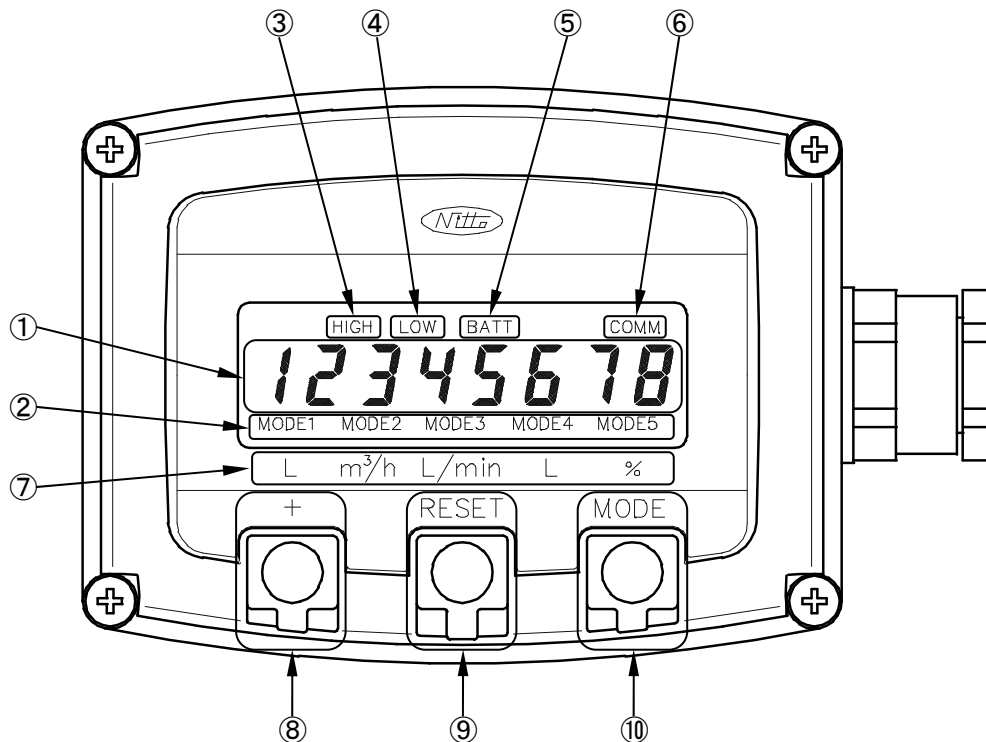

- |  |   |
|--|---|
| <p>① <b>Segment indication :</b><br/>Indicates integrated value, momentary flow rate, etc.</p> <p>② <b>Mode indication :</b><br/>Indicates currently displayed mode.<br/>MODE 1 : Integrated flow value (Non resettable)<br/>MODE 2 : Momentary flow rate ( /h)<br/>MODE 3 : Momentary flow rate ( /min)<br/>MODE 4 : Integrated flow value (Resettable)<br/>MODE 5 : Momentary flow rate (%)</p> <p>③ <b>Upper limit flow rate alarm indication (HIGH) :</b><br/>Lights in case the momentary flow rate exceeded the upper limit flow rate alarm value.</p> <p>④ <b>Lower limit flow rate alarm indication (LOW) :</b><br/>Lights in case the momentary flow rate dropped to below the lower limit flow rate alarm value.</p> | <p>⑤ <b>Battery alarm indication (BATT) :</b><br/>Lights when the residual capacity of the internal battery becomes few. (Only with battery)</p> <p>⑥ <b>External power supply indication (COMM) :</b><br/>Lights when external power is supplied.</p> <p>⑦ <b>Unit nameplate :</b><br/>Indicates the unit in each mode.</p> <p>⑧ <b>+ Button :</b><br/>Not used. (Used in setting mode)</p> <p>⑨ <b>RESET button :</b><br/>Puts the integrated flow value (resettable) to zero.</p> <p>⑩ <b>MODE button :</b><br/>Switches the displayed mode.</p> |
|--|---|

### 6.1.2 Switching of Integrated flow value and Momentary flow rate display


Contents of indication	Contents of operation
<pre> graph TD     MODE1[MODE1: 123456.78] -- "[MODE]" --&gt; MODE2[MODE2: 2.40]     MODE2 -- "[MODE]" --&gt; MODE3[MODE3: 40.0]     MODE3 -- "[MODE]" --&gt; MODE4[MODE4: 12345]     MODE4 -- "[RESET]" --&gt; MODE4_2[MODE4: 000]     MODE4_2 -- "[MODE]" --&gt; MODE5[MODE5: 800]     MODE5 -- "[MODE]" --&gt; MODE1 </pre>	<ul style="list-style-type: none"> <li>● When press the <b>[MODE] button</b> while displaying Integrated flow value (MODE 1), the display switches to Momentary flow rate (/ h) (MODE 2) or Momentary flow rate (/ min) (MODE 3).</li> <li>● When press the <b>[MODE] button</b> while displaying Momentary flow rate (/ h) (MODE 2), the display switches to Integrated flow value (Resettable) (MODE 4).</li> <li>● When press the <b>[MODE] button</b> while displaying Momentary flow rate (/ min) (MODE 3), the display switches to Integrated flow value (Resettable) (MODE 4).</li> <li>● When press the <b>[RESET] button</b> while displaying Integrated flow value (MODE 4), reset the value of Integrated flow value (resettable) to 0.</li> <li>● When press the <b>[MODE] button</b> while displaying Integrated flow value (MODE 4), the display switches to Momentary flow rate (%) (MODE 5).</li> <li>● When press the <b>[MODE] button</b> while displaying Momentary flow rate (%) (MODE 5), display switches to Integrated flow value (MODE 1)</li> </ul>

Note 1) Display switching of Momentary flow rate (/ h) and Momentary flow rate (/ min) is set by data setting item "b1: switching of Momentary flow rate". (Standard: Momentary flow rate (/ h) display)

## 6.2 Batch type

⚠ Electronic Flow Meter for Small Flow Rate "Nico Eye" (Type: NE3E) does not have batch type.

### 6.2.1 Liquid crystal display / component and function of buttons

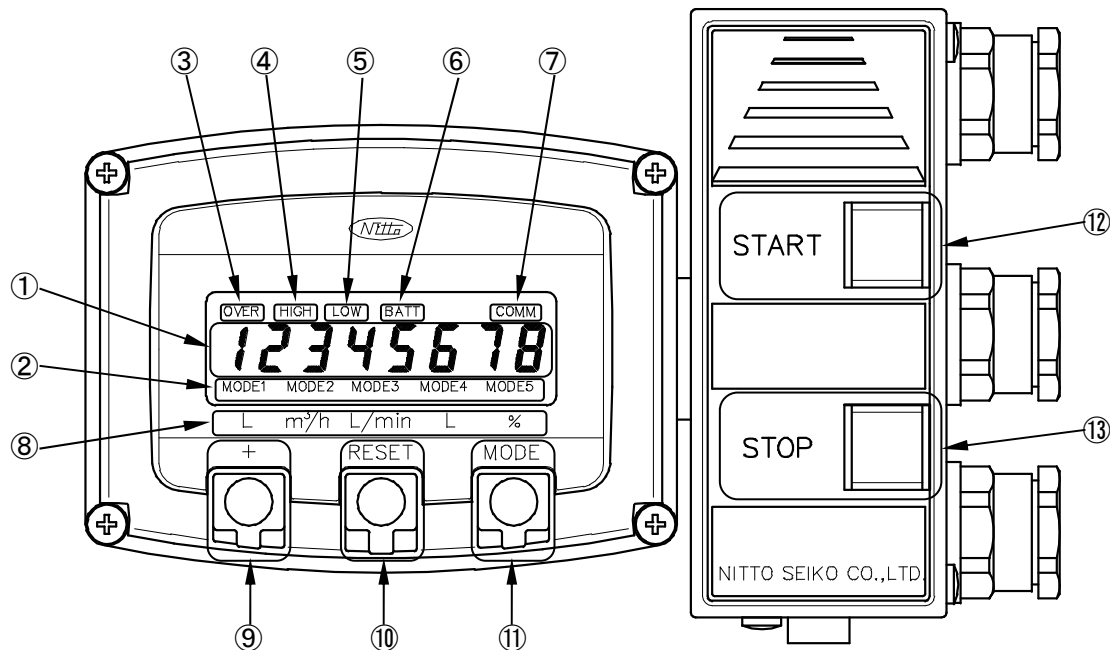

#### ① Segment indication :

Indicates integrated value, momentary flow rate, etc.

#### ② Mode indication :

Indicates currently displayed mode.

MODE 1 : Integrated flow value (Non resettable)

MODE 2 : Momentary flow rate ( /h)

MODE 3 : Momentary flow rate ( /min)

MODE 4 : Batch counter

MODE 5 : Momentary flow rate (%)

#### ③ Batch over indication (OVER) :

Lights when exceeded the batch volume.

#### ④ Upper limit flow rate alarm indication (HIGH) :

Lights in case the momentary flow rate exceeded the upper limit flow rate alarm value.

#### ⑤ Lower limit alarm indication (LOW) :

Lights in case the momentary flow rate dropped to below the lower limit flow rate alarm value.

#### ⑥ Battery alarm indication (BATT) :

Lights when the residual capacity of the internal battery becomes few. (Only with battery)

#### ⑦ External power supply indication (COMM) :

Lights when external power is supplied.

#### ⑧ Unit nameplate :

Indicates the unit in each mode.

#### ⑨ + Button :

Not used. (Used in setting mode)

#### ⑩ RESET button :

Resets the batch counter to the initial value.

#### ⑪ MODE button

Switches the displayed mode.

#### ⑫ START button

Starts or resumes batch operation.

#### ⑬ STOP button


Stops batch operation.

## 6.2.2 Integrated flow value (non-resettable), batch volume, momentary flow rate

Contents of indication	Contents of operation
<pre> graph TD     MODE1[MODE1: 123456.78] -- "[MODE]" --&gt; MODE2[MODE2: 2.40]     MODE2 -- "[MODE]" --&gt; MODE3[MODE3: 400]     MODE3 -- "[MODE]" --&gt; MODE4[MODE4: bt 123.45]     MODE4 -- "[MODE]" --&gt; MODE5[MODE5: 800]     MODE4 -- "[RESET]" --&gt; RESET[bt 50000]     RESET -- "[MODE]" --&gt; MODE4     MODE5 -- "[MODE]" --&gt; MODE1 </pre>	<ul style="list-style-type: none"> <li>● Displays integrated flow value (non-resettable) (MODE 1). When press the <b>[MODE] button</b>, the indication is switched to momentary flow rate (/h) (MODE 2) or momentary flow rate (/min) (MODE 3).</li> <li>● Displays momentary flow rate (/h) (MODE 2). Note 1) When press the <b>[MODE] button</b>, the indication is switched to batch counter (MODE 4).</li> <li>● Displays momentary flow rate (/min) (MODE 3). Note 1) When press the <b>[MODE] button</b>, the indication is switched to batch counter (MODE 4).</li> <li>● Displays batch counter (MODE 4). When press the <b>[MODE] button</b>, the indication is switched to momentary flow rate (%) (MODE 5). When press the <b>[RESET] button</b>, the batch counter value is reset to the initial value.</li> <li>● Displays momentary flow rate (%) (MODE 5). When press the <b>[MODE] button</b>, the indication is switched to integrated flow value (non-resettable) (MODE 1).</li> </ul>

Note 1) Display switching of Momentary flow rate (/ h) and Momentary flow rate (/ min) is set by data setting item "b1: switching of Momentary flow rate". (Standard: Momentary flow rate (/ h) display)

6.2.3 Change of batch amount

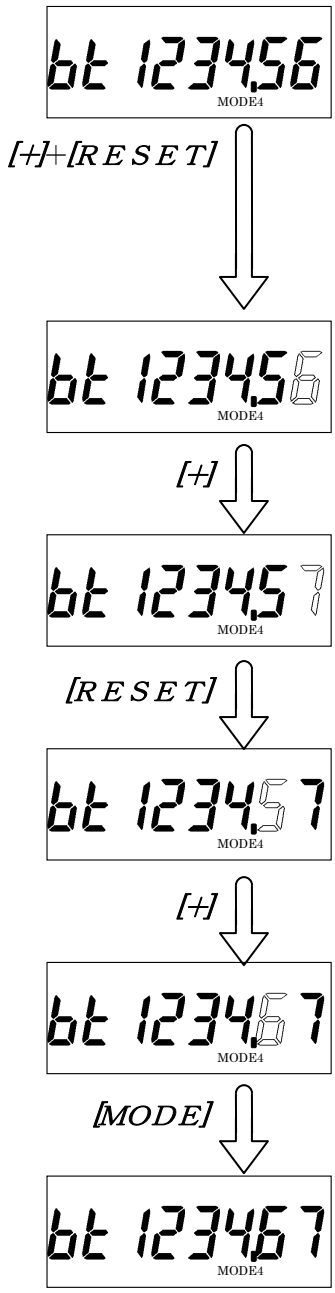Contents of indication	Contents of operation
<div></div>	<ul style="list-style-type: none"><li>● Press the <b>[RESET] button</b> while pressing the <b>[+] button</b> during an indication of the batch counter (MODE 4).</li></ul> <p><u>Note) No change can be made during a measurement or a stop (all displayed digits are blinking).</u></p> <ul style="list-style-type: none"><li>● Display is switched to batch volume setting mode. (Starts blinking.)</li><li>● Change the batch volume by the <b>[+]</b> and <b>[RESET] buttons</b>. When press the <b>[+] button</b>, the blinking digit number increases by 1. When press the <b>[RESET] button</b>, the blinking digit moves.</li><li>● When press the <b>[MODE] button</b>, the batch volume setting mode is terminated. (The modified batch volume is set.)</li></ul>

#### 6.2.4 Actions

- **Counting system**

- Overshoot no-count system

The counter starts counting (starts subtraction on the batch counter) with a start of measurement (pressing the **[START] button**), and stops counting when 0 is reached on the batch counter. It is also available stop counting by pressing **[STOP] button** or **[RESET] button**.

- Overshoot count system

The counter starts counting (starts subtraction on the batch counter) with a start of measurement (pressing the **[START] button**), and stops counting with pressing of the **[RESET] button**. However, if the liquid is flowing when the batch counter comes to zero or when a STOP operation is made, the counting is continued (indicates "OVER" and adds the value when the indicated value comes to under zero) according to the liquid flow.

- **Resetting system**

- Automatic reset system

Automatically resets (returns to batch volume) when the batch counter comes to zero.

- Manual reset system

No resetting though the batch counter comes to zero. Resets with pressing of the **[RESET] button**.

- **Overshoot correcting value**

- Case where counting is made by overshoot count system and that resetting is made by manual reset system

An overshoot is produced because of delayed response of valve, etc. This amount of overshoot (count value) is set for the overshoot correcting value. (The unit of overshoot correcting value is the same as that of the batch counter.)

- **Metering signal**

- Case where overshoot correcting value is 0

This signal is turned ON with start of measurement (pressing of **[START] button**), and turned OFF when zero is reached on the batch counter. It is also turned OFF with pressing of either the **[STOP] button** or **[RESET] button**.

- Case where overshoot correcting value is other than 0

This signal is turned ON with start of measurement (pressing of **[START] button**), and turned OFF when the indication on the batch counter and the overshoot correcting value (count value) become equal to each other. It is also turned OFF with pressing of either the **[STOP] button** or **[RESET] button**.

**Note) This signal is effective in the case where the counting is made by overshoot count system and that resetting is made by manual reset system.**

- **Case of power failure during measurement**

In case of occurrence of a power failure during a measurement, the metering signal is turned OFF and it is not turned ON though the power supply is resumed. The counter does not make counting. The state before power failure is restored with pressing of the **[START] button**.



In the case where you connect a solenoid valve to the flow meter, the response of the solenoid valve is rather slow with a nominal diameter of 40 or over and the actual volume may become larger compared with the set value of batch volume on some occasions. Use solenoid valve of a nominal diameter no larger than 25 mm. When install a solenoid valve of a nominal diameter 40 mm or over, use the flow meter with the overshoot count system.

### 6.2.5 Operation

- **Setting the batch volume**

- (1) Press the **[RESET]** and **[+] buttons** simultaneously.
- (2) Press the **[RESET]** button to move the blinking digit to the position desired to change.
- (3) Change the contents of blinking digit by pressing the **[+] button**.
- (4) Press the **[MODE] button** and set the value.

※For the details, refer to the paragraph "Changing the batch volume".


- **Measuring operation**

- (1) The measurement starts with pressing the **[START] button** and the counter value decreases.
- (2) The measurement stops when 0 is reached on the counter.
  - Case of automatic reset system  
When the counter comes to 0, the batch volume returns to the set value automatically.
  - Case of manual reset system  
The batch volume does not return to the set value though the counter comes to 0.
- (3) The batch volume returns to the set value with pressing of the **[RESET] button**.
- (4) Press the **[STOP] button** to stop the measurement.
- (5) Press the **[RESET] button** to end the measurement.

※When starting measurement, press the **[START] button** while the batch counter (MODE 4) is displayed. Starting is impossible during indication of integrated flow value (non-resettable) (MODE 1), momentary flow rate (MODE 2) or (MODE 3) or momentary flow rate (%) (MODE 5).




Time chart (Case of overshoot count system)

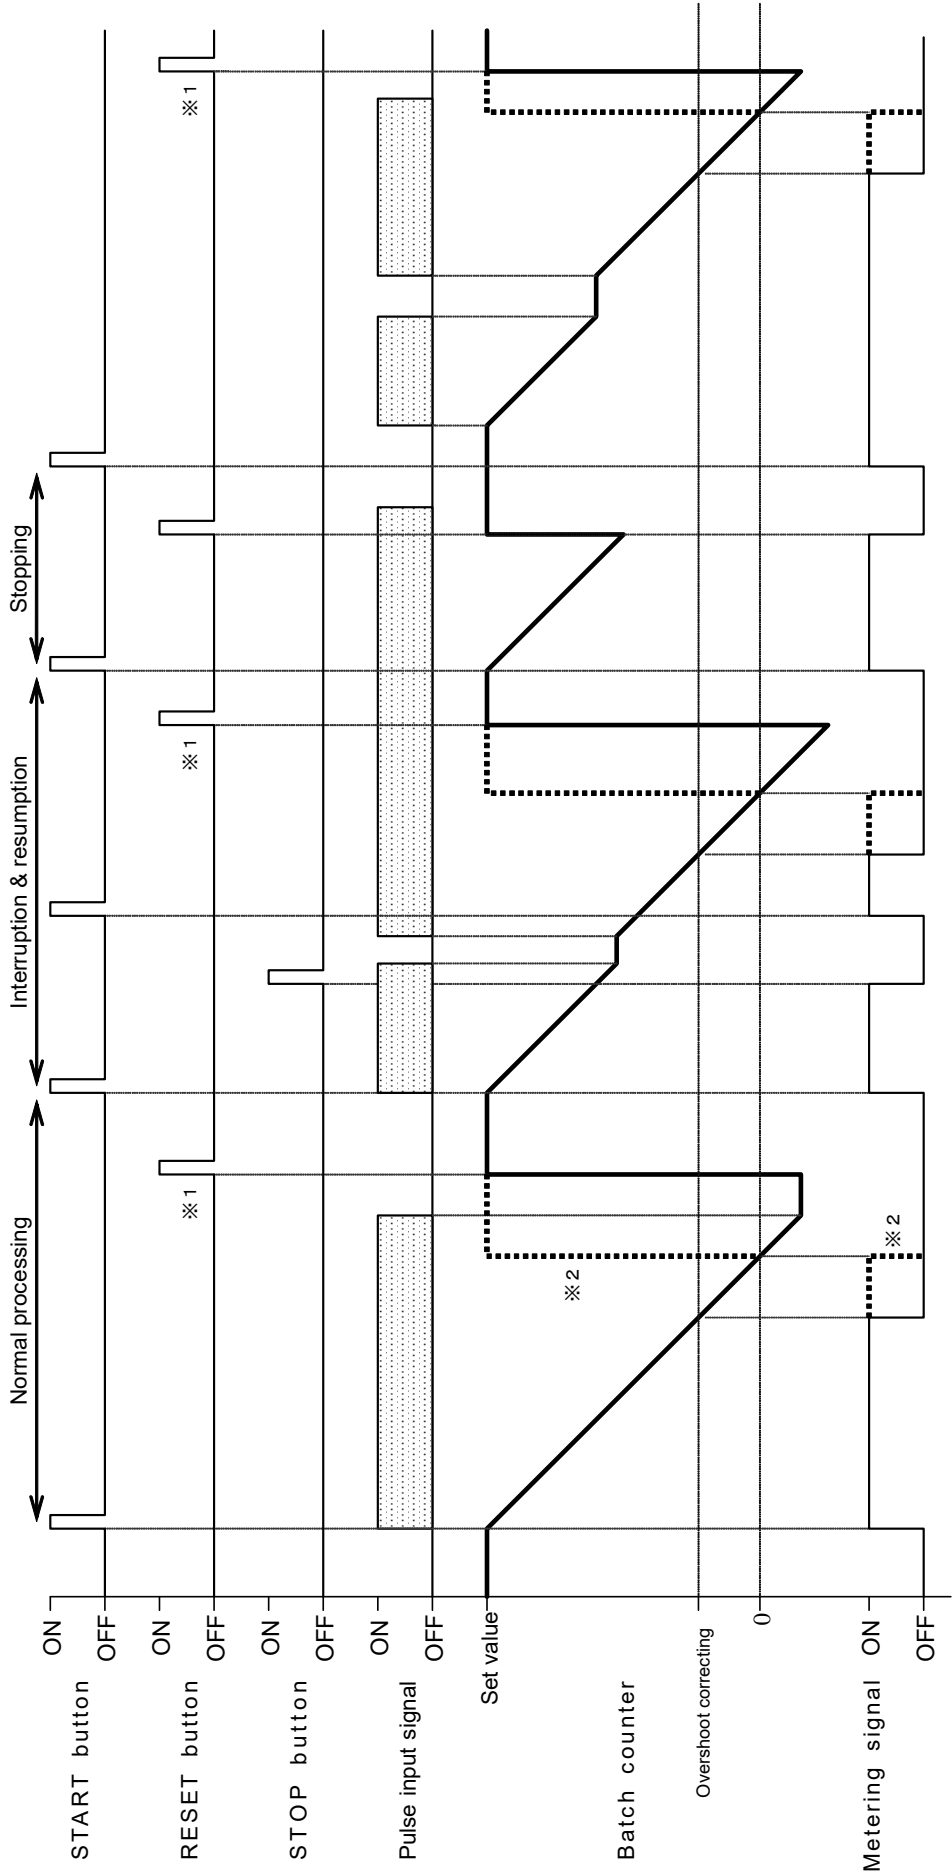

※ 1 : There is no need of resetting in the case of automatic reset system with no change to the set value.

※ 2 : " ..... " indicates a case of automatic reset system.

Time chart (Case of overshoot no-count system)

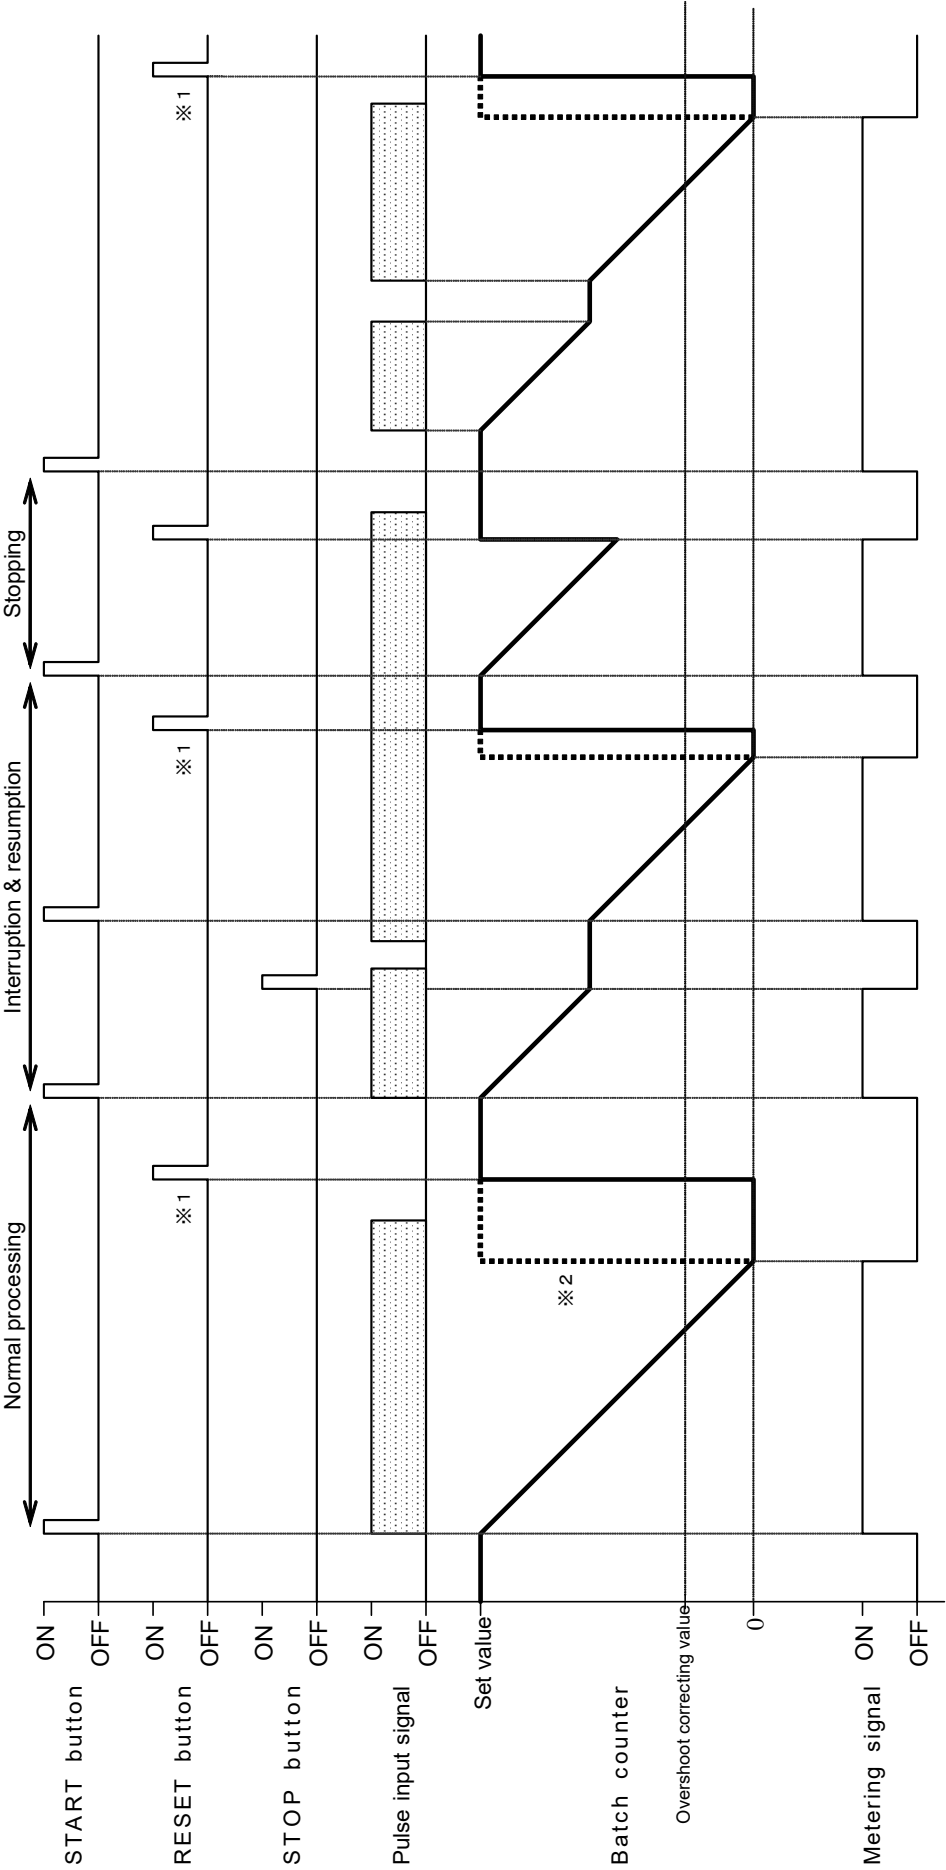

## 7. Data setting method

Unit of integration, etc. can be changed on this flow meter by changing the contents of set items in the data setting mode.

### 7.1 List of set items

Item Group name	1	2	3	4	5	6	7	8	9	Error indication
A Integration	Unit of integration									Error indication * 1
b Momentary flow rate	Switching of momentary flow rate	Unit of flow rate (/h)	Unit of flow rate (/min)	0 ~ 100% Span	Low cutoff	Upper limit alarm value	Lower limit alarm value			Error indication * 1
C Output	Contents of SIG1 output	Contents of SIG2 output	Pulse unit		SIG1 Pulse width adjustment	SIG2 Pulse width adjustment				Error indication * 1
d Batch	Simple batch ON/OFF *2	Automatic reset ON/OFF	Overshoot count ON/OFF	Overshoot correcting value						Error indication * 1
E Processing	Viscosity (Decimal) *3	Viscosity (Index) *3			Momentary flow rate indication updating time	Alarm updating time	Reading of FLASH	Writing in FLASH	hibernation mode	Error indication * 1
F Check	Software version	Meter factor	Simulated output ON/OFF	Simulated output value	Serial number display					Error indication * 1
G Service	Segment check	Input check	Totalize while non batch operation	Battery alarm	Integrated flow	Resettable integrated flow	Serial number	Momentary flow averaging	...	Error indication * 1

\* 1) Display only.


\* 2) Set the value of this item to OFF, for field display type, pulse & alarm output type, and analog output type.

\* 3) This item can be set for type OE3E only. Other models do not show this item.

User level (it can be set by customer)

Service level (it can be set by our service engineer)

## 7.2 Liquid crystal indication / component and function of buttons

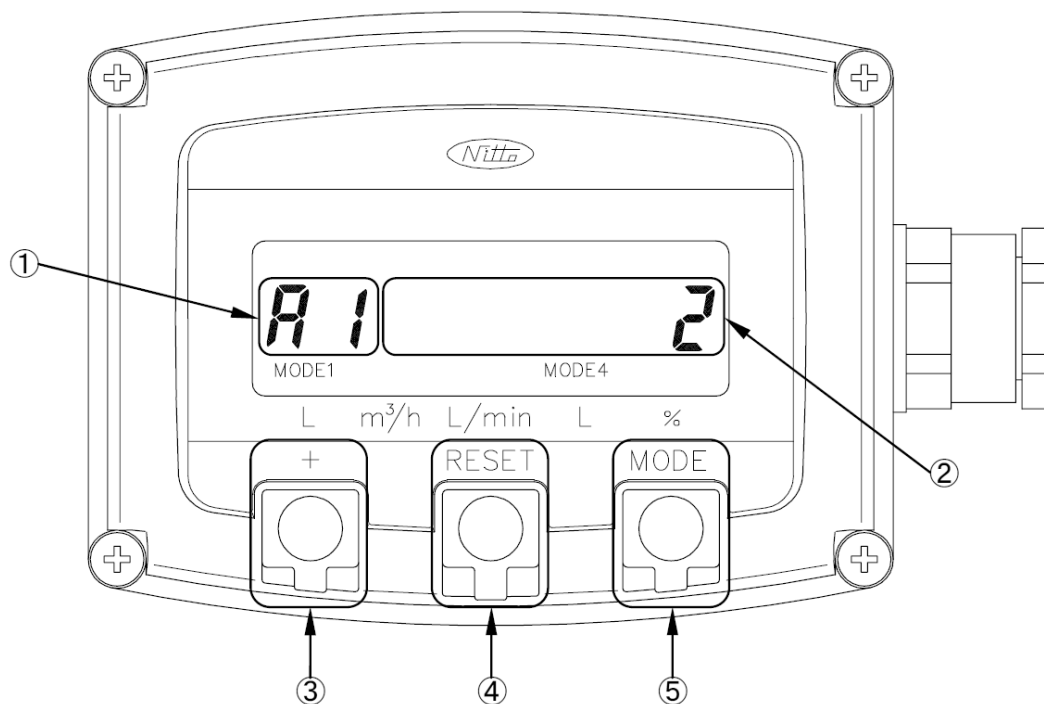

### ① Indication of set item No. :

Indicates the set item No.

### ② Indication of set contents :

Indicates the contents of setting.

### ③ "+" button :

- Used for moving group of the set item list.
- Used for changing the contents of setting.

### ④ RESET button :

- Used for moving digit position of the contents of setting.

### ⑤ MODE button

- Used for moving item in the set item list.
- Used for determining the contents of setting.
- Used for termination of the setting mode.

## 7.3 Operating method in setting mode

### 7.3.1 How to start & end setting mode

Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE]</b> button while pressing <b>[+]</b> button.</li> <li>● The display changes to the pass No. input mode. (Blinking starts.) <ul style="list-style-type: none"> <li>● When press the <b>[MODE]</b> button, the pass No. input mode is terminated.</li> <li>● When press the <b>[+]</b> button, the value in the blinking position increases by 1.</li> <li>● When press the <b>[RESET]</b> button, the blinking digit position moves.</li> </ul> </li> <li>● Press the <b>[+]</b> button, and change the contents of setting to "001"</li> <li>● Press the <b>[MODE]</b> button to enter the data setting mode.</li> <li>● To exit the data setting mode, press and hold the <b>[MODE]</b> button.</li> </ul>

Contents of indication	State of indication
	Expresses lighting
	Expresses blinking


The item which can be set varies depending on the pass number.

- User level : " 0 0 1 "
- Service level : " \* \* \* "

### 7.3.2 How to move set item

Head of group		Item								Error	
Item Group name		1	2	3	4	5	6	7	8	9	Error indication
A Integration	Unit of integration									Error indication * 1	
b	Switching of flow rate	momentary flow rate	rate (/h)	rate (/min)	Space	[MODE]	Upper limit alarm value	Lower limit alarm value			Error indication * 1
[+]	Contents of SIG1 output	Contents of SIG2 output	Pulse unit		SIG1 Pulse width adjustment	SIG2 Pulse width adjustment				Error indication * 1	
d Batch	Simple batch ON/OFF *2	Automatic reset ON/OFF	Overshoot count ON/OFF	Overshoot correcting value							Error indication * 1
E Processing	Viscosity (Decimal) *3	Viscosity (Index) *3			Momentary flow rate indication updating time	Alarm updating time	Reading of FLASH	Writing in FLASH	hibernation mode	Error indication * 1	
F Check	Software version	Meter factor	Simulated output ON/OFF	Simulated output value	Serial number display					Error indication * 1	

- For moving set item, select (move) the item (row) in the group after selecting (move) the set group (column).
- For moving set group, press the **[+]** button at the head of the group.
- After moving to the head of the target group, press the **[MODE]** button to move the target item.

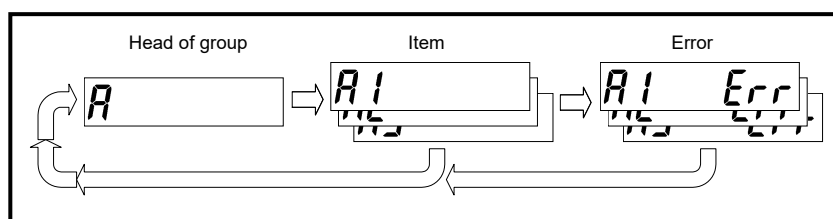

- When press the **[MODE]** button at the last item in the group, that group name and item name are displayed in case there is any error in the set item. If there is no error, display return to the head of the group.
- When press the **[MODE]** button while an error item No. is displayed, the next error item No. is displayed. When there is no more error to be displayed, display return to the head of the group.

## 7.4 Data setting examples

### 7.4.1 Setting integration unit

Set the integration unit for the **Integrated flow** (no resettable) and **Integrated flow** (resettable) display.

#### • Setting method:

- Set set item "A1: Unit of integration".
- Change the unit nameplate seal.





#### Contents of setting:

A1: Unit of integration

Contents of setting	Unit of integration
0	0. 1 m L
1	1 m L
2	0. 0 1 L
3	0. 1 L
4	1 L
5	0. 0 1 m <sup>3</sup>
6	0. 1 m <sup>3</sup>
7	1 m <sup>3</sup>

Note) • The unit of integration available for setting varies depending on the flow meter type and nominal size. For the possible range of setting, refer to the paragraph of "Data A: Parameter list, A1. Unit of integration".

**Example:** Changing the unit of integration from 0.1L to 0.01m<sup>3</sup>

Contents of indication	Contents of operation
 <small>MODE1</small> <small>MODE4</small>	<ul style="list-style-type: none"> <li>• Move to set item "A1: Unit of integration"</li> </ul>
 <small>MODE1</small> <small>MODE4</small>	<ul style="list-style-type: none"> <li>• Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
 <small>MODE1</small> <small>MODE4</small>	<ul style="list-style-type: none"> <li>• Press the <b>[+] button</b> twice to change the contents of setting to 5.</li> </ul>
 <small>MODE1</small> <small>MODE4</small>	<ul style="list-style-type: none"> <li>• Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>

## 7.4.2 Setting momentary flow rate unit

Set the momentary flow rate unit.

### Setting method:

- Set set item "b1: Switching of momentary flow rate".
  - At "b1: Switching of momentary flow rate" = 0, set set item "b2: Unit of flow rate (/h)".
  - At "b1: Switching of momentary flow rate" = 1, set set item "b3: Unit of flow rate (/min)".
- Change the unit nameplate seal.

**Note)** When the momentary flow rate unit has been changed, it is necessary to also change other set items using unit of momentary flow rate.

Set items requiring change: b4: 0~100% span  
b6: Upper limit alarm value  
b7: Lower limit alarm value

### Contents of setting:

b1: Switching of momentary flow rate

Contents of setting	Momentary flow rate mode
0	Momentary flow rate (/h)
1	Momentary flow rate (/min)

b2: Unit of flow rate (/h)

Contents of setting	Unit of momentary flow rate
0	0. 1 mL/h
1	1 mL/h
2	0. 0 1 L/h
3	0. 1 L/h
4	1 L/h
5	0. 0 1 m <sup>3</sup> /h
6	0. 1 m <sup>3</sup> /h
7	1 m <sup>3</sup> /h









b3: Unit of flow rate (/min)

Contents of setting	Unit of momentary flow rate
0	0. 1 mL/min
1	1 mL/min
2	0. 0 1 L/min
3	0. 1 L/min
4	1 L/min
5	0. 0 1 m <sup>3</sup> /min
6	0. 1 m <sup>3</sup> /min
7	1 m <sup>3</sup> /min





Note) The unit of momentary flow rate available for setting varies depending on the flow meter type and nominal size. For the possible range of setting, refer to the paragraph of "Data A: Parameter list, b2: Unit of flow rate (/h) and b3: Unit of flow rate (/min)".



**Example:** Changing the unit of momentary flow rate from 0.01m<sup>3</sup>/h to 1L/min


Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>● Move to set item "b1: Switching of momentary flow rate"</li> </ul>
	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> once to change the contents of setting to 1.</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> and move to set item "b3: Unit of flow rate (/min)".</li> </ul>
	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> once to change the contents of setting to 4.</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>

**Example:** Changing the unit of momentary flow rate from 0.01m<sup>3</sup>/h to 1L/h

Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>● Move to set item "b2: Unit of flow rate (/h)"</li> </ul>
	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> several time to change the contents of setting to 4. (The number of times of pressing of the <b>[+] button</b> varies depending on the nominal size.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b>, to save the data. (The contents of setting stop blinking.)</li> </ul>

### 7.4.3 Setting upper limit alarm value (or lower limit alarm value)

Set the upper limit alarm value (or lower limit alarm value).

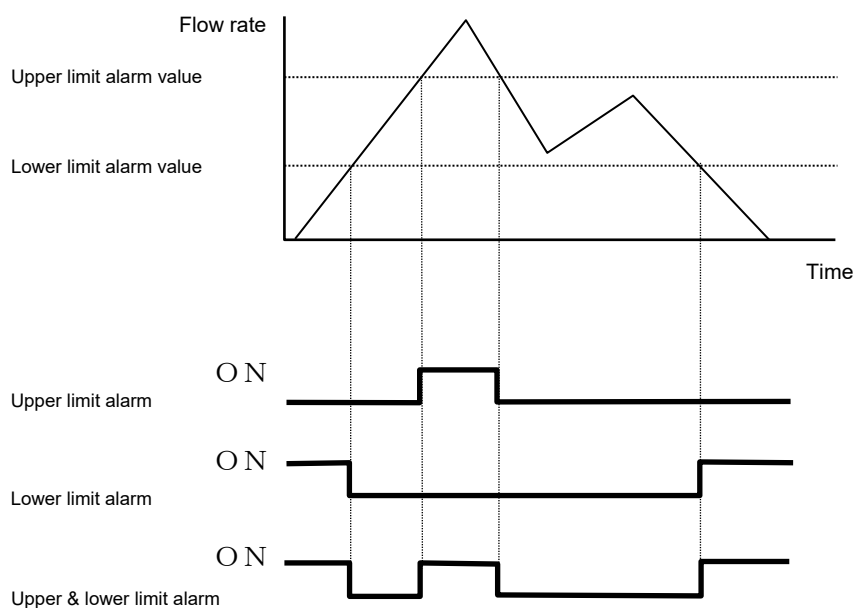

#### Setting method:

Upper limit alarm value: Set set item "b6: Upper limit alarm value".

Lower limit alarm value: Set set item "b7: Lower limit alarm value".

Note) The unit of set value for flow rate alarm value is the same as the unit of momentary flow rate.

#### Contents of setting:

Setting range
$0 \leq \text{Lower limit alarm value} < \text{Upper limit alarm value} \leq 99999$

**Example:** Changing the upper limit flow rate alarm value from 3.00 m<sup>3</sup>/h to 6.50 m<sup>3</sup>/h

Contents of indication	Contents of operation
<p>HIGH</p> <p>66 00300</p> <p>MODE2</p>	<ul style="list-style-type: none"> <li>● Move to set item "b6: Upper limit alarm value".</li> </ul>
<p>HIGH</p> <p>66 00300</p> <p>MODE2</p>	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
<p>HIGH</p> <p>66 00300</p> <p>MODE2</p>	<ul style="list-style-type: none"> <li>● Press the <b>[RESET] button</b> once to move the setting digit by one position to the left.</li> </ul>

<p>HIGH</p> <p>66 003.50</p> <p>MODE2</p>	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> 5 times to change the contents of the position for changing the setting to 5.</li> </ul>
<p>HIGH</p> <p>66 007.50</p> <p>MODE2</p>	<ul style="list-style-type: none"> <li>● Press the <b>[RESET] button</b> once to move the setting digit by one position to the left.</li> </ul>
<p>HIGH</p> <p>66 006.50</p> <p>MODE2</p>	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> 3 times, to change the contents of the position for changing the setting to 6.</li> </ul>
<p>HIGH</p> <p>66 006.50</p> <p>MODE2</p>	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>

#### 7.4.4 Setting 0 ~ 100% span (analog output span)

Set the flow rate span\* for indication of momentary flow rate (MODE 5) and analog output.

\* Analog output type only

##### Setting method:








Set set item "b4: 0 ~ 100% span".

**Note) The unit of set value for span is the same as the unit of momentary flow rate.**

##### Contents of setting:

Setting range
$0 < 0 \sim 100\% \text{ span value} \leq 19999$

**Example:** Changing the 0 ~ 100% span value from 300 L/h to 6000 L/h

Contents of indication	Contents of operation
 MODE2	<ul style="list-style-type: none"> <li>● Move to set item "b4: 0 ~ 100% span".</li> </ul>
 MODE2	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
 MODE2	<ul style="list-style-type: none"> <li>● Press the <b>[RESET] button</b> twice to move the setting digit by two positions to the left.</li> </ul>
 MODE2	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> 7 times, to change the contents of the position for changing the setting to 0.</li> </ul>
 MODE2	<ul style="list-style-type: none"> <li>● Press the <b>[RESET] button</b> once to move the setting digit by one position to the left.</li> </ul>
 MODE2	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> 6 times to change the contents of the position for changing the setting to 6.</li> </ul>
 MODE2	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>

## 7.4.5 Setting the contents of SIG1 (SIG2) output

Set the contents of output\* of SIG1 (SIG2).

\* Pulse & alarm output type, batch type only.

### Setting method:

Contents of output of SIG1: Set set item "C1: Contents of SIG1 output"

Contents of output of SIG2: Set set item "C2: Contents of SIG2 output".

### Contents of setting:

C1: Contents of SIG1 output

Contents of setting	Contents of output
--- (---)	No output
UnS (UnS)	Unitless pulse
Sc (Sc)	Unit pulse
hi (hi)	Upper limit alarm
Lo (Lo)	Lower limit alarm
hL (hL)	Upper & lower limit alarm
bAt (bAt)	Battery alarm*

C2: Contents of SIG2 output

Contents of setting	Contents of output
--- (---)	No output
UnS (UnS)	Unitless pulse
Sc (Sc)	Unit pulse
hi (hi)	Upper limit alarm
Lo (Lo)	Lower limit alarm
hL (hL)	Upper & lower limit alarm
bAt (bAt)	Battery alarm*

\* **Built-in battery type only**

**Example:** Changing the contents of SIG1 output from unitless pulse to upper limit alarm

Contents of indication	Contents of operation
C1 UnS	● Move to set item "C1: Contents of SIG1 output".
C1 UnS	● Display switch to the Data change mode by pressing the <b>[RESET] button</b> . (The contents of setting start blinking.)
C1 hi	● Press the <b>[+] button</b> twice to change the contents of setting to "hi".
C1 hL	● Press the <b>[MODE] button</b> , to save the data. (The contents of setting stop blinking.)

## 7.5 Other functions and operations

### (1) Changing the pulse unit of unit pulse

#### Setting method:

- Set set item "C3: Pulse unit".





#### Contents of setting:

C3: Pulse unit

Contents of setting	Pulse unit
0	0. 1 m L
1	1 m L
2	0. 0 1 L
3	0. 1 L
4	1 L
5	0. 0 1 m <sup>3</sup>
6	0. 1 m <sup>3</sup>
7	1 m <sup>3</sup>

Note) • The unit of pulse available for setting varies depending on the flow meter type and nominal size. For the possible range of setting, refer to the paragraph of "Data A: Parameter list, C3. Pulse unit".

**Example:** Changing the unit of unit pulse from 0.1L to 1L

Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>• Move to set item "C3: Pulse unit".</li> </ul>
	<ul style="list-style-type: none"> <li>• Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>• Press the <b>[+] button</b> once to change the contents of setting to 4.</li> </ul>
	<ul style="list-style-type: none"> <li>• Press the <b>[MODE] button</b>, to save the data. (The contents of setting stop blinking.)</li> </ul>

## (2) Changing the time of hibernation mode.

When the switch operation, liquid flow etc are not detected while set time, it enters hibernation mode. When entering the hibernation mode, the segment display disappears, but when it detects the switch operation, liquid flow etc., it exits the hibernation mode and returns the display.

**Note) Using the hibernation mode reduces battery consumption and extends battery life.**

**Note) While the external power is supplied, it does not enter the hibernation mode even if the set time elapses.**

Setting method:

- Setting item "E9: hibernation mode.

Contents of setting:

Contents of setting	hibernation mode
0	No hibernation mode.
1~9	1 to 9 (hours)

**Example:** Change from 1 hour to no-hibernation mode.

Contents of indication	Contents of operation
E9 1	● Move to set item "E9: hibernation mode".
E9 1	● Display switch to the Data change mode by pressing the <b>[RESET] button</b> . (The contents of setting start blinking.)
E9 0	● Press the <b>[+] button</b> nine times to change the contents of setting to 0.
E9 0	● Press the <b>[MODE] button</b> , to save the data. (The contents of setting stop blinking.)

### (3) Changing the low cutoff

The low cutoff value is set in the % value of 0 ~ 100% span (MODE 5).






#### Setting method:

- Set set item "b5: Low cutoff".

#### Contents of setting:

Setting range
$0.0 \leq \text{Low cutoff} \leq 99.9 (\%)$

**Example:** Changing the low cutoff from 3.0% to 5.0%

Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>• Move to set item "b5:Low cutoff".</li> </ul>
	<ul style="list-style-type: none"> <li>• Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>• Press the <b>[RESET] button</b> once to move the setting digit by one position to the left.</li> </ul>
	<ul style="list-style-type: none"> <li>• Press the <b>[+] button</b> twice to change the contents of setting to 5.</li> </ul>
	<ul style="list-style-type: none"> <li>• Press the <b>[MODE] button</b>, to save the data. (The contents of setting stop blinking.)</li> </ul>



#### (4) Changing the momentary flow rate indication updating time

The indication of momentary flow rate is updated at every second in the standard setting. The updating of indication can be set for every second or for every momentary flow rate calculation. (At the time of delivery from the factory, it is set for updating at every second.)

**Note)** **The updating of indication is made at a very high speed while external power is supplied. Please use with updating of indication at every second at normal times.**

##### Setting method:

- Set set item "E5: Momentary flow rate indication updating time".

##### Contents of setting:

E5: Momentary flow rate indication updating time

Set value	Contents of updating of indication
0	At every calculation of momentary flow rate
1	At every second

**Example:** Changing the momentary flow rate indication updating time from every second to every calculation of momentary flow rate.

Contents of indication	Contents of operation
E5 1	<ul style="list-style-type: none"> <li>• Move to set item "E5: Momentary flow rate indication updating time".</li> </ul>
E5 1	<ul style="list-style-type: none"> <li>• Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
E5 0	<ul style="list-style-type: none"> <li>• Press the <b>[+] button</b> once to change the contents of setting to 0.</li> </ul>
E5 0	<ul style="list-style-type: none"> <li>• Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>

## (5) Changing the alarm indication (output) updating time

The alarm indication (output) is updated at every flow rate calculation in the standard setting.  
The updating of alarm can be set for each momentary flow rate calculation or for every second.  
(The factory setting is "at every calculation of momentary flow rate".)

### Setting method:

- Set set item "E6: Alarm updating time".

### Contents of setting:

E6: Alarm updating time

Set value	Contents of updating of indication
0	At every calculation of momentary flow rate
1	At every second

**Example:** Changing the momentary flow rate indication alarm updating time from every calculation of momentary flow rate to every second.

Contents of indication	Contents of operation
E6 0	● Move to set item "E6: Alarm updating time".
E6 0	● Display switch to the Data change mode by pressing the <b>[RESET] button</b> . (The contents of setting start blinking.)
E6 1	● Press the <b>[+] button</b> once to change the contents of setting to 1.
E6 1	● Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)

(6) To write the setting contents to FLASH.

The contents of setting items are recorded in FLASH.

By recording the setting in FLASH, even if the contents of the setting item disappears, you can read the setting contents from FLASH and restore the original setting.

- ⚠ FLASH writing or reading consumes much power. Repeated FLASH writing and reading during battery operation will shorten battery life.
- ⚠ While external power is supplied, when exiting data setting mode, it automatically writes the set value to FLASH.
- ⚠ During battery alarm indication, FLASH writing and reading may not be performed. (Except when supplying external power)

The data written to FLASH is shown in the table below.

Group name	1	2	3	4	5	6	7	8	9
A Integration	Unit of integration								
b Momentary flow rate	Switching of momentary flow rate	Unit of flow rate (/h)	Unit of flow rate (/min)	0 ~ 100% Span	Low cutoff	Upper limit alarm value	Lower limit alarm value		
C Output	Contents of SIG1 output	Contents of SIG2 output	Pulse unit		SIG1 Pulse width adjustment	SIG2 Pulse width adjustment			
d Batch	Simple batch ON/OFF *2	Automatic reset ON/OFF	Overshoot count ON/OFF	Overshoot correcting value					
E Processing	Viscosity (Decimal) *3	Viscosity (Index) *3			Momentary flow rate indication updating time	Alarm updating time	Reading of FLASH	Writing in FLASH	hibernation mode
F Check	Software version	Meter factor	Simulated output ON/OFF	Simulated output value	Serial number display				
G Service	Segment check	Input check	Totalize while non batch operation	Battery alarm	Integrated flow	Resettable Integrated flow	Serial number	Instantaneous flow averaging	...

Note 2) Set the value of this item to OFF, for field display type, pulse & alarm output type, and analog output type.

Note 3) This item can be set For type OE only. Other models do not show this item.



: Data recorded in FLASH

**Example:** Writing the contents of setting in FLASH

Contents of indication	Contents of operation
<i>E8 Put</i>	● Move to set item "E8: Writing in FLASH "
<i>E8 Start</i>	● Writing in FLASH starts when press the <b>[RESET] button</b> while pressing the <b>[+]</b> <b>button</b> . (Note 1)
<i>E8 End</i>	● "End" is displayed for a few seconds when the writing in FLASH is completed.
<i>E8 Put</i>	● The writing in FLASH is over.

Note 1 In the situation where FLASH writing can not be performed, FLASH writing does not start.

## (7) To read the contents of setting from FLASH

Set set item to the contents recorded in FLASH.

By recording the contents of setting in FLASH, it is possible to read out the contents of setting from FLASH and return them to the setting even in case the contents of the set item disappeared.

- ⚠ FLASH writing or reading consumes much power. Repeated FLASH writing and reading during battery operation will shorten battery life.
- ⚠ While external power is being supplied, when exiting data setting mode, it automatically writes the set value to FLASH.
- ⚠ During battery alarm indication, FLASH writing and reading may not be performed. (Except when supplying external power)

**Example:** Read the contents of setting in FLASH

Contents of indication	Contents of operation
E7 GET	● Move to set item "E7: Reading of FLASH".
E7 Start	● Reading of FLASH starts when press the <b>[RESET] button</b> while pressing the <b>[+]</b> button. (Note 1)
E7 End	● "End" is displayed for a few seconds when the reading from FLASH is completed.
E7 GET	● FLASH reading finished.
E7 Err	● In case of failure in reading, an indication as shown on the left will be given for a few seconds. Make the FLASH reading operation again in such a case.

Note 1 In situations where FLASH reading can not be performed, FLASH reading will not start.

## 7.6 Function and operation of batch type

 Electronic Flow Meter for Small Flow Rate "Nico Eye" (Type: NE3E) does not have batch type.

### (1) To use simplified batch function

Set ON, OFF of the simple batch function.

Note) Set OFF for Field indication type pulse & alarm output type and analog output type.

#### Setting method:

- Set set item "d1: Simple batch".

#### Contents of setting:

d1: Simple batch function

Contents of setting	Simplified batch
<i>off</i> (oFF)	Not use simple batch
<i>on</i> (On)	Use simple batch

**Example:** Changing simple batch from Off to On

Contents of indication	Contents of operation
<i>d1</i> <i>OFF</i>	<ul style="list-style-type: none"> <li>• Move to set item "d1: Simple batch".</li> </ul>
<i>d1</i> <i>OFF</i>	<ul style="list-style-type: none"> <li>• Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
<i>d1</i> <i>On</i>	<ul style="list-style-type: none"> <li>• Press the <b>[+] button</b> once to change the contents of setting to On.</li> </ul>
<i>d1</i> <i>On</i>	<ul style="list-style-type: none"> <li>• Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>

## (2) Changing the reset system

Set ON, OFF of automatic reset.

### Setting method:

- Set set item "d2: Automatic reset".

### Contents of setting:

d2: Automatic reset

Contents of setting	Automatic reset
<i>OFF</i> (OFF)	Not automatic reset (Manual reset system)
<i>On</i> (On)	Automatic reset (Auto reset system)

**Example:** Changing automatic reset from ON to OFF

Contents of indication	Contents of operation
<i>d2</i> <i>On</i>	● Move to set item "d2: Automatic reset"
<i>d2</i> <i>On</i>	● Display switch to the Data change mode by pressing the <b>[RESET]</b> button. (The contents of setting start blinking.)
<i>d2</i> <i>OFF</i>	● Press the <b>[+]</b> button once, to change the contents of setting to OFF.
<i>d2</i> <i>OFF</i>	● Press the <b>[MODE]</b> button, to save the data. (The contents of setting stop blinking.)

### (3) Changing the counting system

Set ON, OFF of the counting system.

#### Setting method:

- Set set item "d3: Overshoot count".

#### Contents of setting:

d3: Overshoot count

Contents of setting	Counting system
<i>OFF</i> (OFF)	Not counting overshoot (Overshoot no-count system)
<i>On</i> (On)	Counting overshoot (Overshoot count system)

**Example:** Changing counting system from OFF to ON

Contents of indication	Contents of operation
<i>d3 OFF</i>	● Move to set item "d3: Overshoot count"
<i>d3 OFF</i>	● Display switch to the Data change mode by pressing the <b>[RESET] button</b> . (The contents of setting start blinking.)
<i>d3 On</i>	● Press the <b>[+] button</b> once, to change the contents of setting to ON.
<i>d3 On</i>	● Press the <b>[MODE] button</b> , to save the data. (The contents of setting stop blinking.)



#### (4) Setting the overshoot amount correcting value

Set amount of overshoot (pulse number) in the case where the setting of reset system is manual resetting and the setting of counting system is overshoot count system.

**Note)** This function does not work in the case where the reset system is set for automatic reset and/or the counting system is set for overshoot no-count system.

##### Setting method:

- Set set item "d4: Overshoot correcting value".

##### Contents of setting:

d4: Overshoot correcting value

Setting range	
0	≤ Overshoot correcting value ≤ 99

**Example:** Changing overshoot correcting value from 0 to 12

Contents of indication	Contents of operation
d4 00	• Move to set item "d4: Overshoot correcting value"
d4 00	• Display switch to the Data change mode by pressing the <b>[RESET] button</b> . (The contents of setting start blinking.)
d4 02	• Press the <b>[+] button</b> twice to change the contents of setting to 2.
d4 02	• Press the <b>[RESET] button</b> once to move the setting digit by one position to the left.
d4 12	• Press the <b>[+] button</b> once to change the contents of setting to 1.
d4 12	• Press the <b>[MODE] button</b> , to save the data. (The contents of setting stop blinking.)

## 7.7 Factory setting

Nominal size symbol 025A0

Set item No.	Designation	Initial set value	Contents of initial setting
A 1	Unit of integration	4	1L
b 1	Switching of momentary flow rate	0	/h
b 2	Unit of flow rate (/h)	5	0.01m <sup>3</sup> /h
b 3	Unit of flow rate (/min)	3	0.1L/min
b 4	0 ~ 100% span	002.50	2.50m <sup>3</sup> /h
b 5	Low cutoff	05.0	5.0%
b 6	Upper limit alarm value	002.50	2.50m <sup>3</sup> /h
b 7	Lower limit alarm value	000.50	0.50m <sup>3</sup> /h
C 1	Contents of SIG1 output	UnS	Unitless pulse output
C 2	Contents of SIG2 output	Sc	Unit pulse output
C 3	Pulse unit	4	1L/P
d 1	Simple Batch *1	OFF	Batch function unused
d 2	Automatic reset	On	Automatic reset
d 3	Overshoot count	OFF	Not counting overshoot
d 4	Overshoot correcting value	00	0 (without correction)
E 5	Momentary flow rate indication updating time	1	At every second
E 6	Alarm updating time	0	At every calculation of momentary flow rate
E 9	Hibernation mode	1	Hibernation after 1 hour.
SIG1	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
SIG2	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
G 5	Integrated flow (Non-resettable)	00000000	0L
G 6	Resettable integrated flow	00000000	0L

\*1. Set OFF for Field indication type, pulse & alarm output type and analog output type.  
Set ON for batch type.

Nominal size symbol 025B0

Set item No.	Designation	Initial set value	Contents of initial setting
A 1	Unit of integration	4	1L
b 1	Switching of momentary flow rate	0	/h
b 2	Unit of flow rate (/h)	5	0.01m <sup>3</sup> /h
b 3	Unit of flow rate (/min)	3	0.1L/min
b 4	0 ~ 100% span	005.00	5.00m <sup>3</sup> /h
b 5	Low cutoff	05.0	5.0%
b 6	Upper limit alarm value	005.00	5.00m <sup>3</sup> /h
b 7	Lower limit alarm value	001.00	1.00m <sup>3</sup> /h
C 1	Contents of SIG1 output	UnS	Unitless pulse output
C 2	Contents of SIG2 output	Sc	Unit pulse output
C 3	Pulse unit	4	1L/P
d 1	Simple Batch *1	OFF	Batch function unused
d 2	Automatic reset	On	Automatic reset
d 3	Overshoot count	OFF	Not counting overshoot
d 4	Overshoot correcting value	00	0 (without correction)
E 5	Momentary flow rate indication updating time	1	At every second
E 6	Alarm updating time	0	At every calculation of momentary flow rate
E 9	Hibernation mode	1	Hibernation after 1 hour.
SIG1	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
SIG2	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
G 5	Integrated flow (Non-resettable)	00000000	0L
G 6	Resettable integrated flow	00000000	0L

\*1. Set OFF for Field indication type, pulse & alarm output type and analog output type.  
Set ON for batch type.

Nominal size symbol 040A0

Set item No.	Designation	Initial set value	Contents of initial setting
A 1	Unit of integration	4	1L
b 1	Switching of momentary flow rate	0	/h
b 2	Unit of flow rate (/h)	5	0.01m <sup>3</sup> /h
b 3	Unit of flow rate (/min)	3	0.1L/min
b 4	0 ~ 100% span	007.00	7.00m <sup>3</sup> /h
b 5	Low cutoff	05.0	5.0%
b 6	Upper limit alarm value	007.00	7.00m <sup>3</sup> /h
b 7	Lower limit alarm value	001.50	1.50m <sup>3</sup> /h
C 1	Contents of SIG1 output	UnS	Unitless pulse output
C 2	Contents of SIG2 output	Sc	Unit pulse output
C 3	Pulse unit	4	1L/P
d 1	Simple Batch *1	OFF	Batch function unused
d 2	Automatic reset	On	Automatic reset
d 3	Overshoot count	OFF	Not counting overshoot
d 4	Overshoot correcting value	00	0 (without correction)
E 5	Momentary flow rate indication updating time	1	At every second
E 6	Alarm updating time	0	At every calculation of momentary flow rate
E 9	Hibernation mode	1	Hibernation after 1 hour.
SIG1	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
SIG2	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
G 5	Integrated flow (Non-resettable)	00000000	0L
G 6	Resettable integrated flow	00000000	0L

\*1. Set OFF for Field indication type, pulse & alarm output type and analog output type.  
Set ON for batch type.

Nominal size symbol 040B0, 050A0

Set item No.	Designation	Initial set value	Contents of initial setting
A 1	Unit of integration *2	5	0.01m <sup>3</sup>
b 1	Switching of momentary flow rate	0	/h
b 2	Unit of flow rate (/h)	6	0.1m <sup>3</sup> /h
b 3	Unit of flow rate (/min)	4	1L/min
b 4	0 ~ 100% span	0015.0	15.0m <sup>3</sup> /h
b 5	Low cutoff	05.0	5.0%
b 6	Upper limit alarm value	0015.0	15.0m <sup>3</sup> /h
b 7	Lower limit alarm value	0003.0	3.0m <sup>3</sup> /h
C 1	Contents of SIG1 output	UnS	Unitless pulse output
C 2	Contents of SIG2 output	Sc	Unit pulse output
C 3	Pulse unit *2	5	0.1m <sup>3</sup> /P
d 1	Simple Batch *1	OFF	Batch function unused
d 2	Automatic reset	On	Automatic reset
d 3	Overshoot count	OFF	Not counting overshoot
d 4	Overshoot correcting value	00	0 (without correction)
E 5	Momentary flow rate indication updating time	1	At every second
E 6	Alarm updating time	0	At every calculation of momentary flow rate
E 9	Hibernation mode	1	Hibernation after 1 hour.
SIG1	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
SIG2	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
G 5	Integrated flow (Non-resettable) *2	000000.00	0.01m <sup>3</sup>
G 6	Resettable integrated flow *2	000000.00	0.01m <sup>3</sup>

\*1. Set OFF for Field indication type, pulse & alarm output type and analog output type.  
Set ON for batch type.

\*2. Initial setting for batch type is 4(1L).

Nominal size symbol 050B0

Set item No.	Designation	Initial set value	Contents of initial setting
A 1	Unit of integration *2	5	0.01m <sup>3</sup>
b 1	Switching of momentary flow rate	0	/h
b 2	Unit of flow rate (/h)	6	0.1m <sup>3</sup> /h
b 3	Unit of flow rate (/min)	4	1L/min
b 4	0 ~ 100% span	0025.0	25.0m <sup>3</sup> /h
b 5	Low cutoff	05.0	5.0%
b 6	Upper limit alarm value	0025.0	25.0m <sup>3</sup> /h
b 7	Lower limit alarm value	0006.0	6.0m <sup>3</sup> /h
C 1	Contents of SIG1 output	UnS	Unitless pulse output
C 2	Contents of SIG2 output	Sc	Unit pulse output
C 3	Pulse unit *2	5	0.1m <sup>3</sup> /P
d 1	Simple Batch *1	OFF	Batch function unused
d 2	Automatic reset	On	Automatic reset
d 3	Overshoot count	OFF	Not counting overshoot
d 4	Overshoot correcting value	00	0 (without correction)
E 5	Momentary flow rate indication updating time	1	At every second
E 6	Alarm updating time	0	At every calculation of momentary flow rate
E 9	Hibernation mode	1	Hibernation after 1 hour.
SIG1	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
SIG2	Kind of signal		Voltage no-contact (positive logic)
	Pulse signal width	5.0	5.0 msec
G 5	Integrated flow (Non-resettable) *2	000000.00	0.01m <sup>3</sup>
G 6	Resettable integrated flow *2	000000.00	0.01m <sup>3</sup>

\*1. Set OFF for Field indication type, pulse & alarm output type and analog output type.  
Set ON for batch type.

\*2. Initial setting for batch type is 4(1L).

## 7.8 Setting for use

In the case where you changed the set value when using the flow meter, enter the contents of setting in the following table:

Set item No.	Designation	Set value	Contents of setting
A 1	Unit of integration		
b 1	Switching of momentary flow rate		
b 2	Unit of flow rate (/h)		
b 3	Unit of flow rate (/min)		
b 4	0 ~ 100% span		
b 5	Low cutoff		
b 6	Upper limit alarm value		
b 7	Lower limit alarm value		
C 1	Contents of SIG1 output		
C 2	Contents of SIG2 output		
C 3	Pulse unit		
d 1	Simple Batch *1		
d 2	Automatic reset		
d 3	Overshoot count		
d 4	Overshoot correcting value		
E 5	Momentary flow rate indication updating time		
E 6	Alarm updating time		
E 9	Hibernation mode		
SIG1	Kind of signal		
	Pulse signal width		
SIG2	Kind of signal		
	Pulse signal width		

\*1. Set OFF for Field indication type, pulse & alarm output type and analog output type.  
Set ON for batch type.

## **8. Operation**

### **8.1 Treatment before flowing of liquid**

#### **8.1.1 Checking after piping installation & wiring**



Check the nameplate of the flow meter to make sure that its contents are conformable to the operating conditions. Also confirm that there is no error in the method of installation, piping connection and wiring again.

#### **8.1.2 Flushing**



To completely remove dust, weld refuse, etc. produced with piping work, remove the flow meter, install a short pipe of the same length as the distance between flow meter faces and perform flushing. After that, install the flow meter.

### **8.2 Precautions to take before start of operation**

In the early period of operation, air inside the piping is discharged at high speed, and there are cases where the internal parts are damaged because of high-speed operation. To prevent such damage, open the respective valves slowly and evacuate air sufficiently.

[Valve opening/closing procedure]

- ① Upstream & downstream side valves → Fully close.
- ② Bypass valve → Fully open.
- ③ Upstream side valve → Slightly open.
- ④ Downstream side valve → Slightly open.
- ⑤ Flow the liquid.
- ⑥ Bypass valve → Gradually close.
- ⑦ Upstream & downstream side valves → Gradually open up to a proper flow rate in the prescribed range.



Check for any leakage from various parts, or unusual noise and vibrations from the flow

### **8.3 Operating precautions**

#### **8.3.1 Working flow rate**



Keep the normal flow rate at approximately 70% of the maximum flow rate of the flow meter, considering fluctuations of flow rate, service life of flow meter, etc.

#### **8.3.2 Precautions regarding use of high-temperature liquid**

- (1) Retightening of bolts

When measuring a high-temperature liquid, retighten the bolts for protection against loosening of body bolts.

- (2) Prevention of burning




#### **Warning**

The body gets very hot. Take protective measures against burning.




## 9. Maintenance

### 9.1 Measuring section disassembling procedure

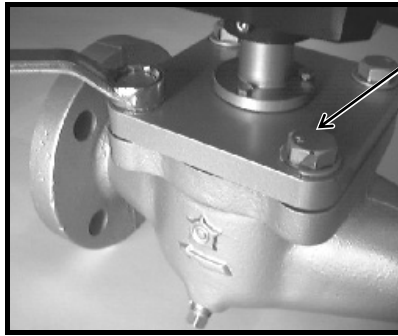

Body bolt


Remove all body bolts.

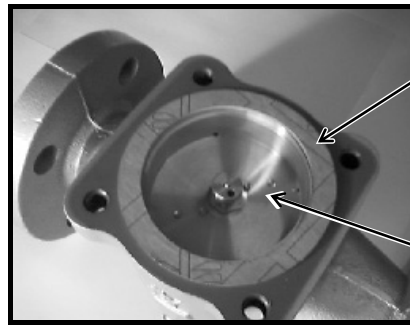

Packing

Inner structure set


Remove the body packing, and take out the Inner structure set. Take care not to lose the knock pin.

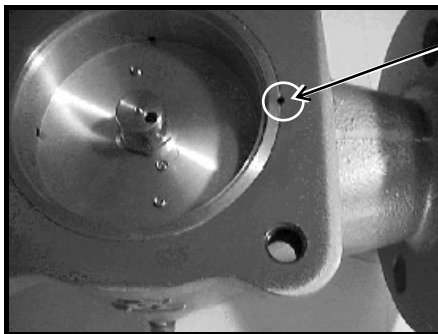

Knock pin



Check whether the impeller turns smoothly.

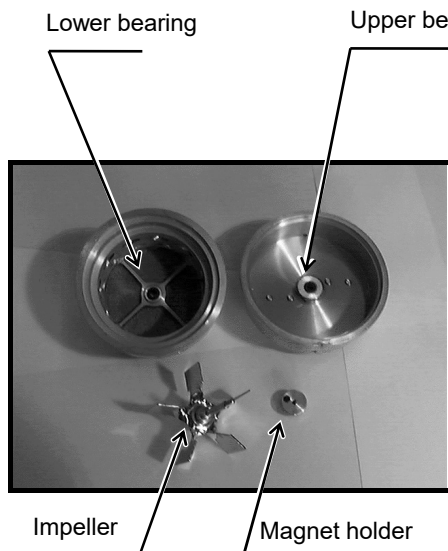


Lower bearing

Upper bearing

Impeller


Magnet holder

If the impeller does not turn lightly, wear of bearing, etc. is suspected. Replace defective parts to new ones.

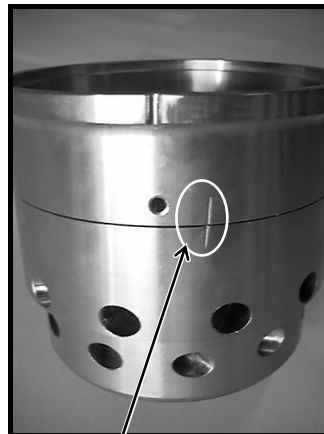

Match mark

The upper and lower inner structure set have match mark. Make the marks agree with other in the assembling.

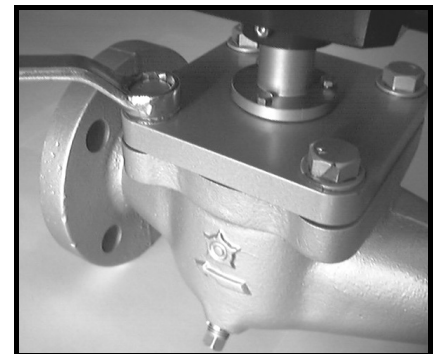

Tighten all body bolts. The body packing must be replaced to new one without fail.

## 9.2 Simulated output

This flow meter has a function of simulated output for making indication and output regardless of the actual flow rate. You can check wire connection or exchange of signal with external equipment by using this function.

**Note)** Be sure to supply external power when using the simulated output function.

Signals available for simulated output:

● **Pulse & alarm output type**

Unit pulse  
Upper limit alarm  
Lower limit alarm  
Upper & lower limit  
alarm

● **Analog output type**

Analog signal

● **Batch type**

Unit pulse  
Upper limit alarm  
Lower limit alarm  
Upper & lower limit alarm  
Metering signal 1  
Metering signal 2

**Note)** Unitless pulse and battery alarm cannot be output by simulation.

**Setting method:**

- Set set item "F3: Simulated output".
  - Set set item "F4: Simulated output value".
- The simulated output value is set in % value of 0 ~ 100% span (MODE 5).

**Contents of setting:**

F3: Simulated output













Contents of setting	Momentary flow rate mode
<b>On</b> (On)	Output simulated output
<b>OFF</b> (OFF)	Not output simulated output

F4: Simulated output value






Setting range
$0.0 \leq \text{Simulated output value} \leq 199.9(\%)$

- ⚠ Blink "MODE" indication while simulated output is in operation.
- ⚠ The simulated output operation ends automatically when about 13 minutes past and shifts to normal operation.


**Example:** Perform simulated output value at 80%.

Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>● Supply external power. (COMM lights.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Move to set item "F3: Simulated output".</li> </ul>
	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> once to change the contents of setting to ON.</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Move to set item "F4: Simulated output value".</li> </ul>
	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[RESET] button</b> twice to move the setting changing digit by 2 positions to the left.</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> 8 times to change the contents of setting to 8.</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[RESET] button</b> once to move the setting changing digit by 1 position to the left.</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> once to change the contents of setting to 0</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> to save the data. (The contents of setting stop blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Continue pressing the <b>[MODE] button</b> to end the setting mode. (Simulated output starts.) <b>The MODE indicator blinks during a simulated output.</b></li> </ul>

**Example:** End simulated output

Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>● Move to set item "F3: Simulated output".</li> </ul>
	<ul style="list-style-type: none"> <li>● Display switch to the Data change mode by pressing the <b>[RESET] button</b>. (The contents of setting start blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> once to change the contents of setting to oFF.</li> </ul>
	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b>, to save the data. (The contents of setting stop blinking.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Continue pressing the <b>[MODE] button</b> to end the setting mode.</li> </ul>

**Error indication:**

Contents of indication	Contents of operation
	<ul style="list-style-type: none"> <li>● External power source was cut off during a simulated output. Supply external power.</li> </ul>

### 9.3 Battery replacing procedure


If the residual capacity of the battery becomes small, "BATT" lights on the LCD display unit.

If "BATT" lit, replace the battery by the following procedure:


- (1) Turn off the external power  
(when external power is supplied).

⚠ Cut off the power supply from outside before replacement work.

- (2) Remove the screw at 4 corners of the counting unit, and open the counting unit.

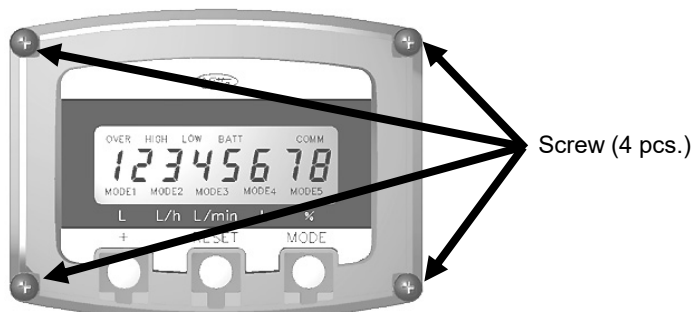


- (3) Remove the 2 screws fastening the battery.

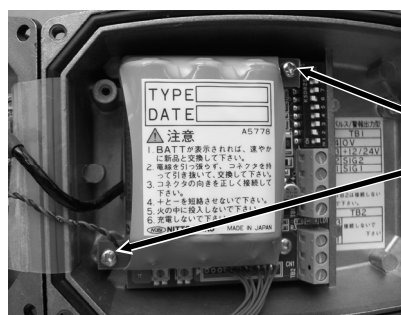

⚠ Take care not to let drop the screw(s) in the counting unit.

- (4) Remove the battery connector on the back face of the LCD display unit.

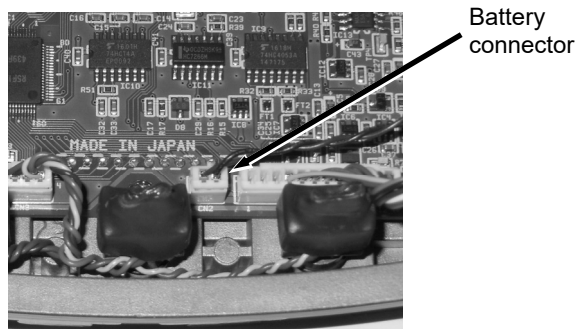

⚠ Extract by holding the connector.  
 ⚠ Connect by checking the orientation of the connector.  
 ⚠ Do not short-circuit between (+) and (-) of the battery.  
 ⚠ Do not throw the battery in a fire.  
 ⚠ Do not charge the battery.

- (5) Connect the connector of a new battery.

- (6) Tighten 2 screws for fastening the battery.

⚠ Take care not to pinch the cable.

- (7) Assemble the counting unit.

- (8) Supply external power (if external power was supplied before).

**Note) Perform the connection of battery connector within one minute.**

There are cases where a battery alarm appears after replacement of the battery with a new one, but there is nothing unusual about it. (The battery alarm disappears in a few minutes.)


## 9.4 Counting unit resetting procedure

In case the counting unit failed to work normally, initialize the counting unit by the following procedure:


- (1) Turn off the external power  
(when external power is supplied).

⚠ Cut off the power supply from outside before reset work.

- (2) Remove the screw at 4 corners of the counting unit, and open the counting unit.

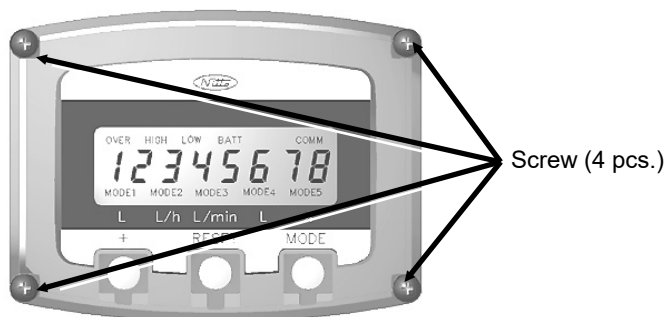

- (3) Press the reset button on the back face of the display unit.

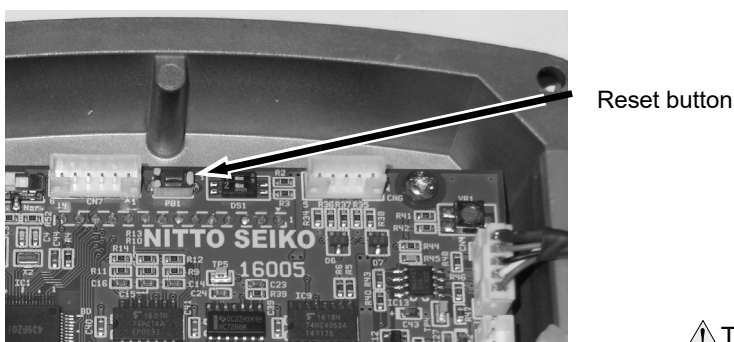

⚠ Take care not to pinch the cable.

- (4) Assemble the counting unit.

- (5) Supply external power (if external power was supplied before).



### Caution

In the case where the recorded data was broken because of an operating error, the total integration, the reset integration and the respective set values change to the contents saved in FLASH with a resetting operation. When proceed resetting work, check the respective set values.


## 9.5 Analog output adjusting procedure

The analog output value is adjusted at the time of delivery.


In case of any deviation of the analog output value, adjust the analog output by the following procedure:

### (1) Output printed circuit board

Remove the screw at 4 corners of the counting unit case and open the counting unit. There is output printed circuit board under the battery.

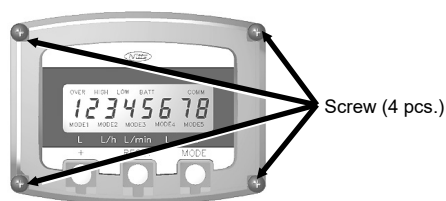

Screw (4 pcs.)

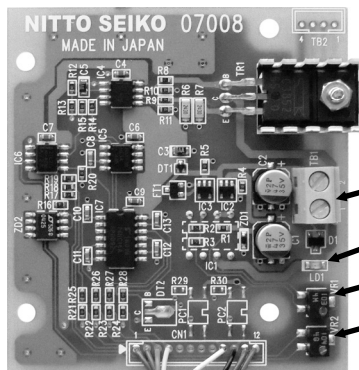

① Terminal block for connecting analog output

② External power supply LED

③ 4 mA adjuster

④ 20 mA adjuster

#### ① Terminal block for connecting analog output (TB1)

This is a terminal block for connecting external power supply and analog signal.

#### ② External power supply LED (LD1)

Lights when external power is supplied.

#### ③ 4 mA adjuster (VR1)

This is an adjuster for analog output at a flow rate of 0%

#### ④ 20 mA adjuster (VR2)

This is an adjuster for analog output at a flow rate of 100%.


### (2) Contents of adjustment

#### ● 4 mA adjuster (VR1)



The current value increases when turn the adjuster in the clockwise direction.  
Adjust in such a way the 4 mA is indicated at a flow rate of 0%.


#### ● 20 mA adjuster (VR2)



The current value increases when turn the adjuster in the clockwise direction.  
Adjust in such a way the 20 mA is indicated at a flow rate of 100%.

### (3) Adjusting method

1. Connect an ammeter as shown below.

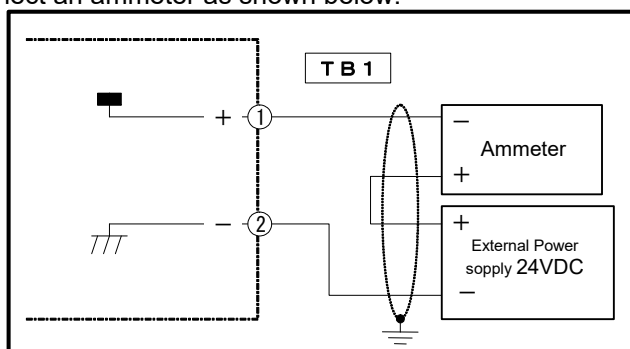

2. Supply external power, and set the flow rate at 0% by using the simulated output function.  
(For the method of simulated output, refer to "9.2 Simulated output".)
3. Adjust in a way to obtain a current output of 4 mA on the 4 mA adjuster (VR1).
4. Set flow rate at 100% with the simulated output function.
5. Adjust in a way to obtain a current output of 20 mA on the 20 mA adjuster (VR2).
6. Stop the simulated output function.
7. Stop the supply of external power and put back the wiring to its initial state.

## 9.6 Pulse width changing procedure


The pulse output signal width is adjusted to 5 ms as factory setting. To change the pulse signal width, please change according to the following procedure.

### Change procedure :

1. Select the pulse signal width from the pulse signal width selection table.
2. Adjust the signal type setting SW (DS1) 4 or 8 to the desired signal width setting range.
3. Supply external power.
4. Enter "001" in the pass number on the pass number input mode and enter data setting mode.
5. Move to "Setting item C5: SIG1 pulse width adjustment" or "C6: SIG2 pulse width adjustment".
6. While checking the signal width displayed on the LCD, adjust the signal width with VR1 or VR2.

#### (1) Output printed circuit board

Remove the screws at 4 corners of the counting unit case and open the counting unit. There is output printed circuit board under the battery.

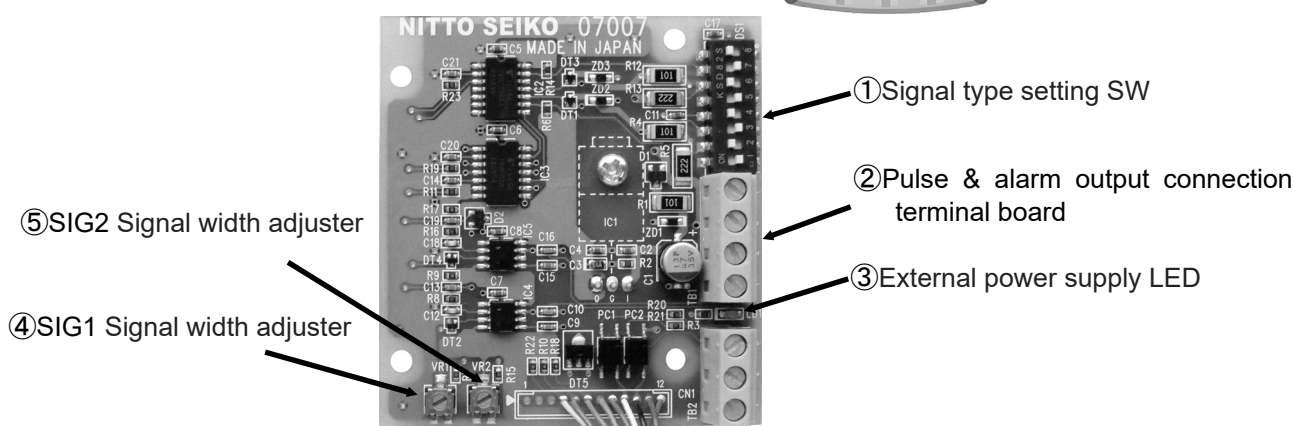

#### ① Signal type setting SW (DS1)

Sets the signal type of SIG1, SIG2 and the range of VR1, VR2.

#### ③ External power supply LED (LD1)

Lights when external power is supplied.

#### ② Pulse & alarm output connection terminal board (TB1)

This is a terminal block for connecting external power supply, SIG1 signal and SIG2 signal.

#### ④ SIG1 Signal width adjuster (VR1)

This is an adjuster for pulse width of SIG1.

#### ⑤ SIG2 Signal width adjuster (VR2)

This is an adjuster for pulse width of SIG2.

### (2) Contents of setting


#### ●SIG 1 signal width range setting

Contents of setting of DS1	Signal width (VR1) Setting range
ON <input type="checkbox"/> 4	Approx. 0.5~20ms
ON <input type="checkbox"/> 4	Approx. 5~200ms

#### ●SIG2 signal width range setting


Contents of setting of DS1	Signal width (VR2) Setting range
ON <input type="checkbox"/> 8	Approx. 0.5~20ms
ON <input type="checkbox"/> 8	Approx. 5~200ms

#### ●SIG1 signal width adjuster (VR1)



The pulse width increases when turn the adjuster in the clockwise direction.

#### ●SIG2 signal width adjuster (VR2)



The pulse width increases when turn the adjuster in the clockwise direction.





**(3) Pulse signal width selection table**

Type	Nominal size & volume symbol	Mf (mL)	Max flow rate (L/h)	Output pulse unit	Pulse period (ms)	Maximum pulse width (ms)
AE	025A0	13.6	2,500	0.1 L	137.1	34.3
				1 L ~	1,429.6	200.0
	025B0	26.2	5,000	0.1 L	56.6	14.1
				1 L	716.8	179.2
				0.01 m <sup>3</sup> ~	7,187.2	200.0
	040A0	29.7	7,000	0.1 L	45.8	11.5
				1 L	504.1	126.0
				0.01 m <sup>3</sup> ~	5,132.2	200.0
	040B0	79.5	15,000	1 L	229.0	57.2
				0.01 m <sup>3</sup> ~	2,385.0	200.0
	050A0	79.5	15,000	1 L	229.0	57.2
				0.01 m <sup>3</sup> ~	2,385.0	200.0
	050B0	113.3	25,000	1 L	130.5	32.6
				0.01 m <sup>3</sup> ~	1,435.7	200.0

⚠ Do not set the pulse width longer than the maximum pulse width specified in the pulse width table. Pulse may overlap, and normal pulse signal may not be output.

⚠ Alarm output is always ON (or OFF) during alarm output regardless of this setting.

**Example:** Change the signal width of SIG 1 from 5 ms to 100 ms.

Display content (setting content)	Operation contents
ON  → ON  4 4	<ul style="list-style-type: none"> <li>● Turn DS1-4 to ON. (Change the signal width setting range to Approx. 5~200 ms)</li> </ul>
MODE1 406 COMM	<ul style="list-style-type: none"> <li>● Supply external power. (COMM lights.)</li> </ul>
PASS 000 COMM	<ul style="list-style-type: none"> <li>● While displaying the integrated flow or integrated flow (resettable), press the <b>[MODE] button</b> while pressing <b>[+] button</b> to switch to the pass number input mode.</li> <li>● Press the <b>[MODE] button</b> to exit the pass number input mode.</li> <li>● Press the <b>[+] button</b>, the value in the blinking position increases by 1.</li> <li>● Press the <b>[RESET] button</b>, the blinking digit position moves.</li> </ul>
PASS 00 COMM	<ul style="list-style-type: none"> <li>● Set the pass number to "001".</li> <li>● Press the <b>[MODE] button</b> to enter the data setting mode.</li> </ul>
[ COMM	<ul style="list-style-type: none"> <li>● Press the <b>[+] button</b> several times to move to "C output group".</li> </ul>
C5 COMM	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> several times to move to "C 5: SIG 1 pulse width adjustment".</li> </ul>
C5 1000 COMM	<ul style="list-style-type: none"> <li>● Press the <b>[RESET] button</b>, and monitoring of the SIG 1 pulse width starts.</li> <li>● Turn VR1 to adjust the pulse width to 100 ms.</li> </ul>
C5 COMM	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> to end "C5: SIG1 Pulse Width Adjustment".</li> </ul>
MODE1 406 COMM	<ul style="list-style-type: none"> <li>● Keep pressing the <b>[MODE] button</b> to exit the data setting mode.</li> </ul>

⚠ Although pulse is output from the signal output terminal during pulse width monitoring, it is not abnormal

## 9.7 Batch type

⚠ Electronic Flow Meter for Small Flow Rate "Nico Eye" (Type: NE3E) does not have batch type.

### 9.7.1 Fuse replacing procedure


Perform replacement of fuse by the following procedure:

(1) Turn off the power supply for metering signal 2.


(2) Turn off the external power supply.

⚠ Cut off all external power supplies before starting the work.

(3) Remove the screw at 4 corners of the batch case on the side face of the counting unit, and open the lid.

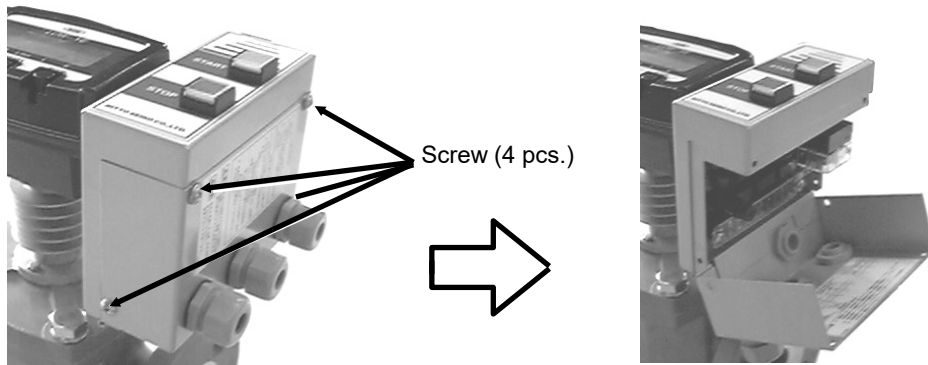

(4) Open the lid of the fuse holder provided at the left top of TB3 by turning it in the counterclockwise direction.

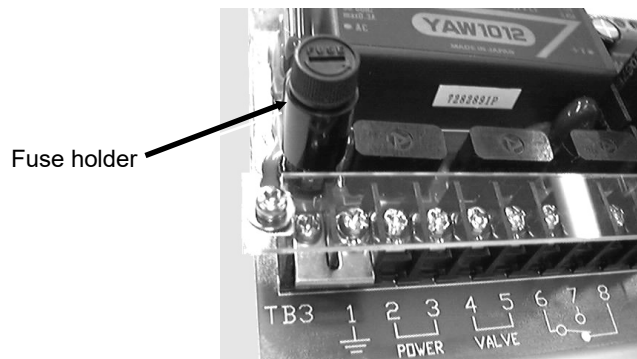

Note: The photo indicates a type of AC specification

(5) Replace the fuse, and close the cap of the fuse holder.

(6) Close the lid of the batch case, and tighten the screw at 4 corners.

⚠ Take care not to pinch the cable.

(7) Supply external power.

(8) Supply power for metering signal 2.



Use fuse of the following specifications and type:

Slow blowing fuse 250VAC, 4A, 5.2  $\phi \times 20$

Recommended manufacturer: FUJI TERMINAL INDUSTRY CO.,LTD.

## 9.7.2 Relay replacing procedure


Replace relay by the following procedure:

(1) Turn off the power supply for metering signal 2.


⚠ Cut off all external power supplies before starting the work.

(2) Turn off the external power supply.

(3) Remove the screw at 4 corners of the batch case on the side face of the counting unit, and open the lid.

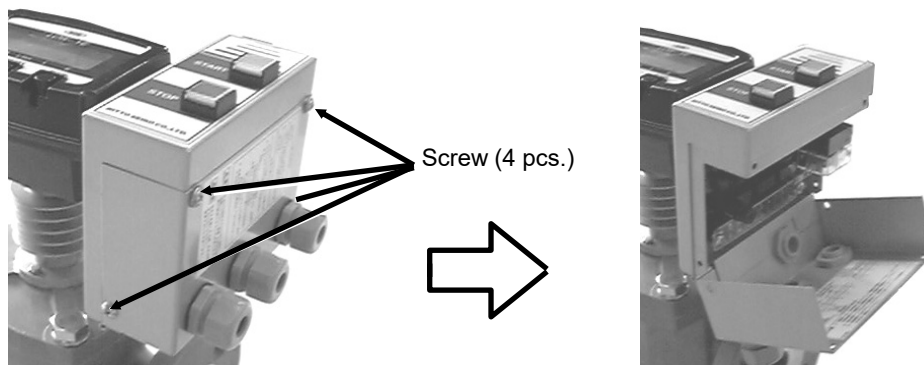

(4) Relays are arranged at the left top of TB4.  
Remove the relay and replace it with a new relay of prescribed type.

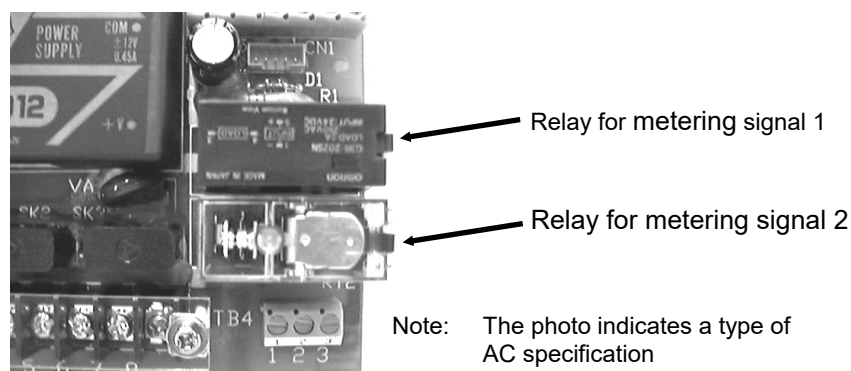

(5) Close the lid of the batch case, and tighten the screw at 4 corners.

⚠ Take care not to pinch the cable.

(6) Supply external power.

(7) Supply power for metering signal 2.



Use relay of the following specifications and type:

### • AC specification

	Specification	Type	Manufacturer
Relay for metering signal 1	Solid-state relay	G3R-202SN 24VDC	Omron
Relay for metering signal 2	Power relay	G2R-1-SN 24VDC	Omron


### • 24VDC specification

	Specification	Type	Manufacturer
Relay for metering signal 1	Power relay	G2R-1-SN 24VDC	Omron
Relay for metering signal 2	Power relay	G2R-1-SN 24VDC	Omron

## 9.8 Disassembly drawing


### Counting section (disassembly drawing 1)

Note: Mounting screws are not included.  
Please indicate it separately if necessary.

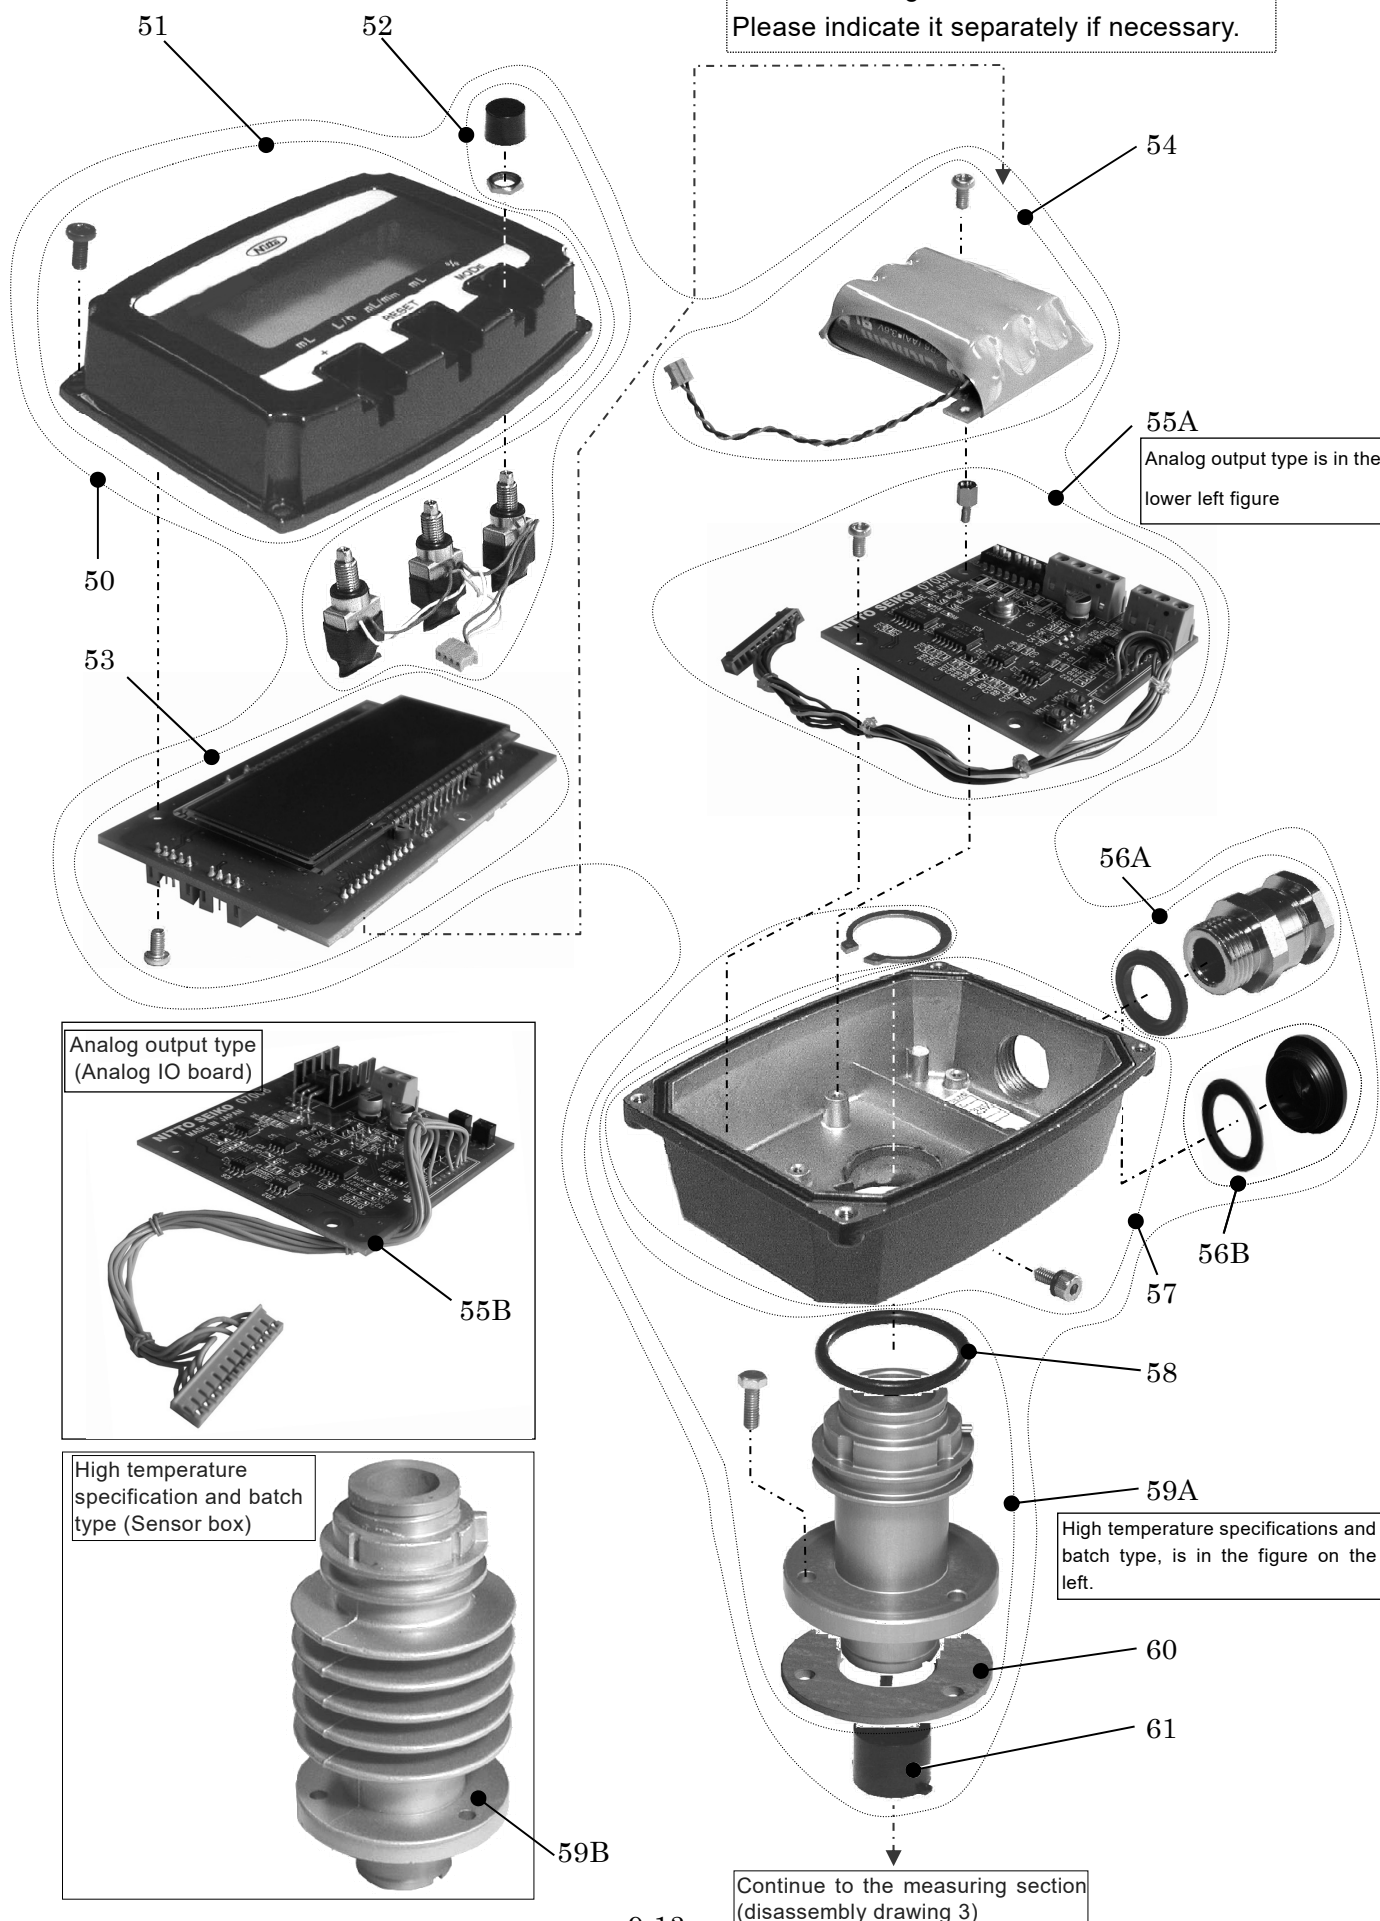


## Counting section (disassembly drawing 2)

[Batch type (batch part only)]

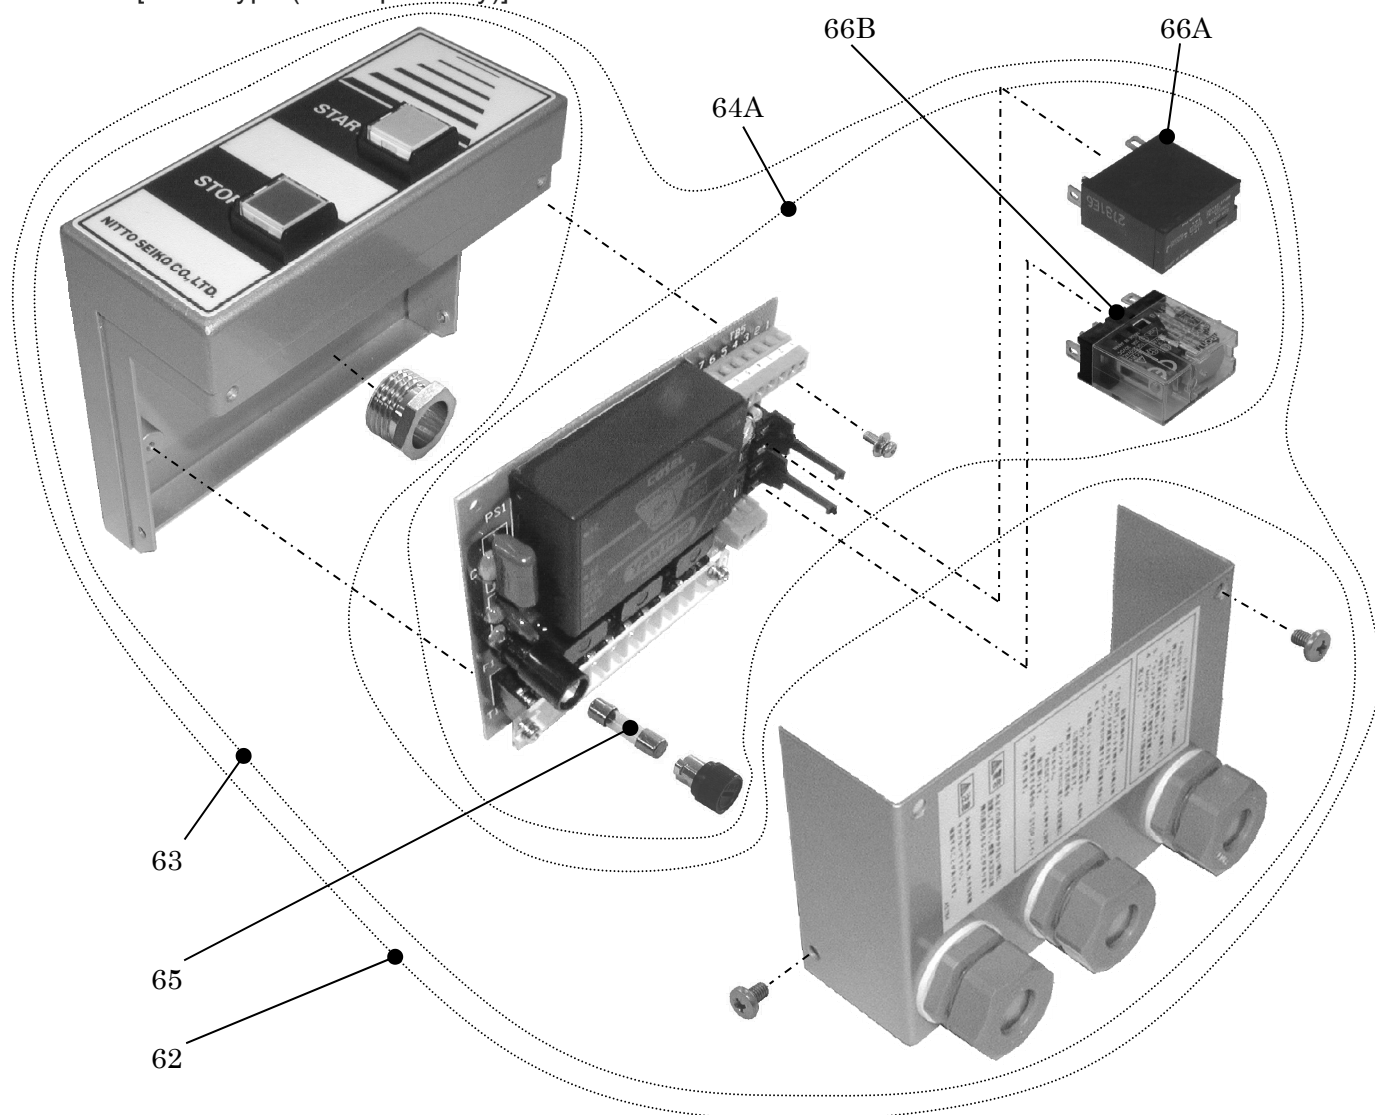


24 V DC specification

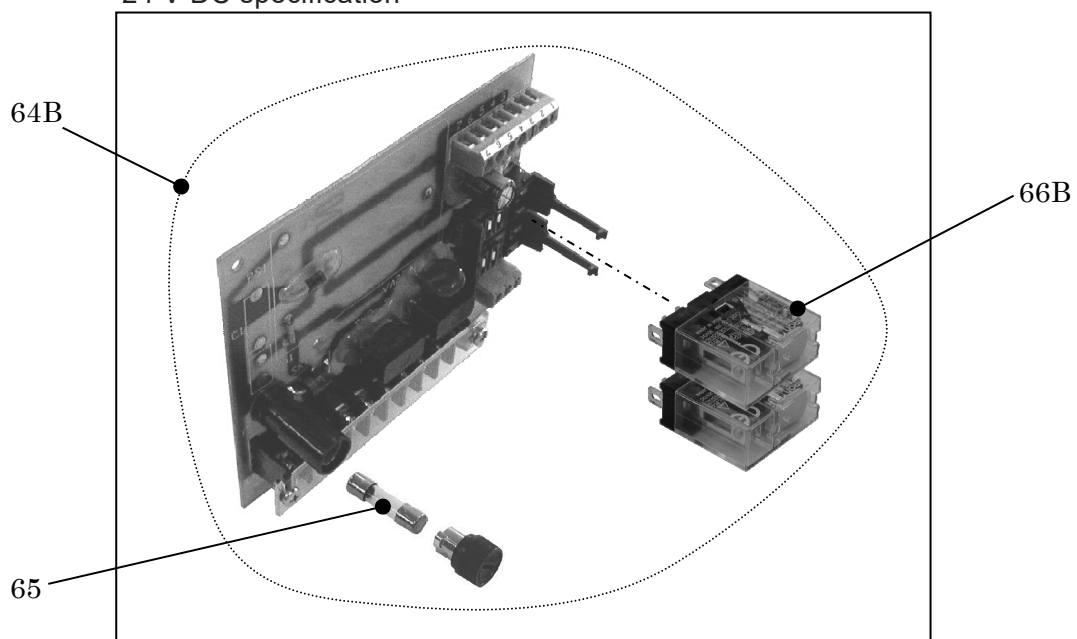

Note: Mounting screws are not included.  
Please indicate it separately if necessary.

Measuring section (disassembly drawing 3)

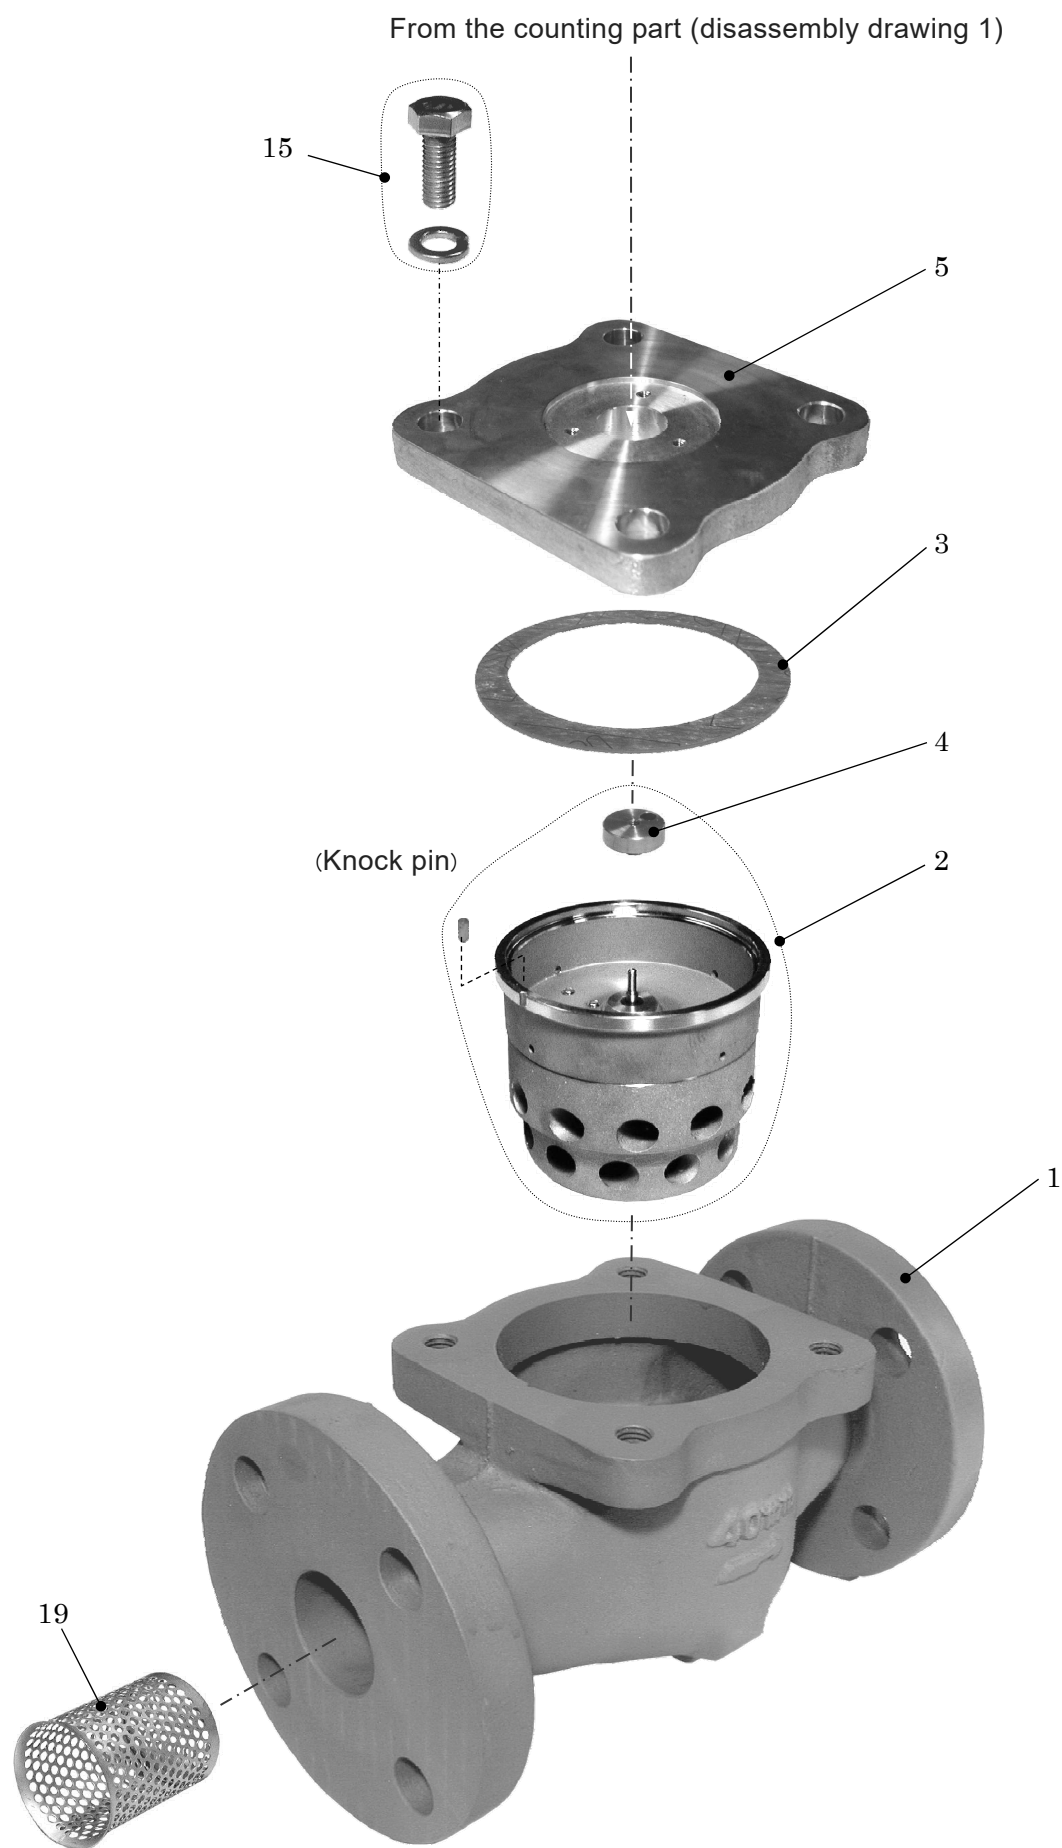

Parts name

No.	Parts name	Q'ty	No.	Parts name	Q'ty
1	Main body (including 19)	1	57	Lower case	1
2	Inner structure set	1	58	O-ring	1
3	Packing	1	59A	Sensor box unit	1
4	Magnet holder	1	59B	Sensor box unit (Batch type)	1
5	Head cover	1	60	Thermal packing	1
15	Body bolt	4	61	Sensor unit	1
19	Built-in strainer	1	62	Batch unit	1
50	Counting unit set	1	63	Batch box set	1
51	Upper case	1	64A	Batch board (AC specification)	1
52	Push button unit	1	64B	Batch board (24 VDC specification)	1
53	CPU board	1	65	Fuse	1
54	Battery unit	1	66A	Solid state relay	1(0)
55A	Pulse I / O board	1	66B	Power relay	1(2)
55B	Analog I / O board	1			
56A	Cable ground (Pulse & alarm output type) (Analog output type)	1			
56B	Blind plug (Field indication type)	1			



# 10. Troubleshooting

## 10.1 Troubleshooting

### (1) Disagreement between actual flow rate and indicated value of integration on flow meter.

Cause	Remedy	Reference page
<ul style="list-style-type: none"> <li>● Use out of flow range</li> </ul>	<ul style="list-style-type: none"> <li>● Change flow rate</li> <li>● Change flow meter size</li> </ul>	3-2
<ul style="list-style-type: none"> <li>● Open bypass valve</li> <li>● No rise of pressure on inlet side</li> </ul>	<ul style="list-style-type: none"> <li>● Check piping system.</li> </ul>	
<ul style="list-style-type: none"> <li>● Mixing of air in measured liquid</li> </ul>	<ul style="list-style-type: none"> <li>● Install air separator, etc.</li> <li>● Change piping system</li> </ul>	
<ul style="list-style-type: none"> <li>● Clogged strainer</li> </ul>	<ul style="list-style-type: none"> <li>● Clean strainer element.</li> </ul>	
<ul style="list-style-type: none"> <li>● Biting of dust and scale in rotor or impeller, and preventing these rotation.</li> </ul>	<ul style="list-style-type: none"> <li>● Disassemble measuring unit, clean and inspect parts for damage.</li> </ul>	9-1
<ul style="list-style-type: none"> <li>● Frozen measured liquid, preventing rotation of rotor or impeller</li> </ul>	<ul style="list-style-type: none"> <li>● Install thermal insulation to the flow meter's measuring part, strainer, and pipe.</li> </ul>	
<ul style="list-style-type: none"> <li>● Unmatching of unit of integration on flow meter (Unmatching of set item A1: Unit of integration)</li> </ul>	<ul style="list-style-type: none"> <li>● Set set item A1: Unit of integration.</li> </ul>	7-5
<ul style="list-style-type: none"> <li>● Flow meter in simulated output mode (MODE indication blinking)</li> </ul>	<ul style="list-style-type: none"> <li>● Terminate simulated output mode.</li> </ul>	9-2

### (2) Disagreement between integrated value on flow meter and output pulse number on flow meter.

Cause	Remedy	Reference page
<ul style="list-style-type: none"> <li>● No supply of external power</li> </ul>	<ul style="list-style-type: none"> <li>● Supply external power.</li> </ul>	5-6
<ul style="list-style-type: none"> <li>● Wrong wire connection</li> </ul>	<ul style="list-style-type: none"> <li>● Correct connection.</li> </ul>	5-6
<ul style="list-style-type: none"> <li>● Wrong signal type</li> </ul>	<ul style="list-style-type: none"> <li>● Correct signal type.</li> </ul>	5-1
<ul style="list-style-type: none"> <li>● Short pulse width, without counting by receiving instrument (signal width: standard 5 ms)</li> </ul>	<ul style="list-style-type: none"> <li>● Change receivable signal width by the receiver.</li> <li>● Adjust output signal width.</li> </ul>	9-8
<ul style="list-style-type: none"> <li>● Long pulse width, with overlapping of pulses (signal width: standard 5 ms)</li> </ul>	<ul style="list-style-type: none"> <li>● Adjust output signal width.</li> </ul>	9-8
<ul style="list-style-type: none"> <li>● Wrong contents of output signal (Wrong contents of set item C1: SIG1 output, C2: SIG2 output)</li> </ul>	<ul style="list-style-type: none"> <li>● Set contents of either set item C1: SIG1 output or C2: SIG2 output.</li> </ul>	7-11
<ul style="list-style-type: none"> <li>● Wrong output pulse unit (Wrong set item C3: Pulse unit)</li> </ul>	<ul style="list-style-type: none"> <li>● Set set item C3: Pulse unit.</li> </ul>	7-12
<ul style="list-style-type: none"> <li>● Flow meter in simulated output mode (MODE indication blinking)</li> </ul>	<ul style="list-style-type: none"> <li>● Terminate simulated output mode.</li> </ul>	9-2

(3) No change from "0" of momentary flow rate indicated on flow meter even with flowing of liquid.

Cause	Remedy	Reference page
● Use out of flow rate range	● Change flow rate ● Change flow meter size	3-2
● Open bypass valve ● No rise of pressure on inlet side	● Check piping system.	
● Clogged strainer	● Clean strainer element.	
● Biting of dust and scale in rotor or impeller, and preventing these rotation.	● Disassemble measuring unit, clean and inspect parts for damage.	9-1
● Frozen measured liquid, preventing rotation of rotor or impeller	● Install thermal insulation to the flow meter's measuring part, strainer, and pipe.	
● Unmatching of momentary flow rate unit on flow meter (Unmatching of set item b1: Switching of momentary flow rate, b2: Unit of flow rate (/h), b3: Unit of flow rate (/min))	● Set set item b1: Switching of momentary flow rate, b2: Unit of flow rate (/h), b3: Unit of flow rate (/min).	7-6
● Use under low cutoff	● Set set item b5: Low cutoff ● Set set item b4: 0 ~ 100% span.	7-14
● Flow meter in simulated output mode (MODE indication blinking)	● Terminate simulated output mode.	9-2

(4) No signal output from flow meter

Cause	Remedy	Reference page
● No supply of external power	● Supply external power.	5-6
● Wrong wire connection	● Correct connection.	5-6
● Wrong signal type	● Correct signal type.	5-1
● Short pulse width, without counting by receiving instrument (signal width: standard 5 ms)	● Change signal width receivable by the receiver. ● Adjust output signal width.	9-8
● Wrong contents of output signal (Wrong contents of set item C1: SIG1 output, C2: SIG2 output)	● Set contents of either set item C1: SIG1 output or C2: SIG2 output.	7-11
● Wrong output pulse unit (Wrong set item C3: Pulse unit)	● Set set item C3: Pulse unit.	7-12
● Flow meter in simulated output mode (MODE indication blinking)	● Terminate simulated output mode.	9-2

**(5) Integrated volume agrees, but no agreement of momentary flow rate.**

Cause	Remedy	Reference page
● Unmatching of momentary flow rate unit on flow meter (Unmatching of set item b1: Switching of momentary flow rate,, b2: Unit of flow rate (/h), b3: Unit of flow rate (/min))	● Set set item b1: Switching of momentary flow rate,, b2: Unit of flow rate (/h), b3: Unit of flow rate (/min)	7-6

**(6) Disagreement between flow rate and analog output**

Cause	Remedy	Reference page
● No supply of external power	● Supply external power.	5-6
● Wrong wire connection	● Correct connection.	5-6
● Wrong analog span (Wrong set item b4: 0 ~ 100% span)	● Set set item b4: 0 ~ 100% span.	7-10
● Deviation of analog output value	● Adjust analog output value.	9-7
● Flow meter in simulated output mode (MODE indication blinking)	● Terminate simulated output mode.	9-2

Flow meter has rotation parts such as rotor (or impeller) and bearing.

Trouble caused by the biting of dust and scale, or trouble caused by worn of frictional parts used for a long time may occurred.

We recommend to carry out daily or periodic inspection in order to maintain the accuracy at first. Interval of inspection is vary from usage and environment, but we recommend inspection every year, and recommend inspection at our factory every three year at least.

Inspection shall be carried out by the person who understand the flow meter's principle.

## 10.2 Confirmation items at inquiry.

When making inquiries, please record the current flow meter setting contents by doing the following work in addition to the flow meter model code and serial number of the name plate.

Display content	Operation contents
<p>123456.78</p> <p>[+] + [MODE]</p> <p>PASS 000</p> <p>[+]</p> <p>PASS 002</p> <p>[MODE]</p> <p>3233-221 Setting content display mode</p>	<ul style="list-style-type: none"> <li>● Press the <b>[MODE] button</b> while pressing <b>[+] button</b>. <ul style="list-style-type: none"> <li>● When press the <b>[MODE] button</b>, the pass No. input mode is terminated.</li> <li>● When press the <b>[+] button</b>, the value in the blinking position increases by 1.</li> <li>● When press the <b>[RESET] button</b>, the blinking digit position moves.</li> </ul> </li> <li>● Press <b>[+]button</b> to change the setting to "002".</li> <li>● Press <b>[MODE]button</b> to enter the setting content display mode. The display is switched every 10 seconds, and total of 3 screens are displayed. Please fill in the contents of each screen on the form.</li> <li>● When the display of 3 screens ends, the screen returns to the normal processing screen.</li> </ul>









Display content

Display example	Contents of display value	Display contents of flowmeter
	①b2: Unit of flow rate (/h) ②b3: Unit of flow rate (/min) ③A1: Unit of integration ④C3: Pulse unit ⑤C1: Contents of SIG1 output ⑥C2: Contents of SIG2 output ⑦B1: Switching of momentary flow rate	
	①E2: Viscosity (index) ②E1: Viscosity (decimal) ③b5: Low cutoff	
	①F1: Software version ②b4: 0~100%Span	

Please also check the following contents from name plate.

Type of flow meter (MODEL)	
Serial number (SER.No.)	

### 10.3 Special display screen list

	Display	Display content	Corrective action
At power on (During CPU reset processing)		It started up with the internal set value saved.	Please use as it is.
		The integrated value was read from FLASH.	Please use as it is.
		Integrated value and internal set value were read from FLASH.	Please use as it is.
		Appropriate values are set because the integrated value and the internal set value were abnormal.	Please contact us.
When external power is off (When battery is removed)		The operation was stopped.	Please use as it is.
		After recording the integrated value in FLASH, the operation was stopped.	Please use as it is.
		Entered the pass number input mode.	Please press the <b>[MODE] button</b> and exit the pass number setting mode.
		The external power supply was turned off during simulated output.	Please supply external power supply.

# DATA A: PARAMETER LIST

This section present all parameters used for the electronic flow meter for water.

●Contents of respective items

Set item No.	Designation	Range & contents of data	Ref. page	Unit	Description
①	②	③	④	⑤	⑥

## Contents of items

	Item	Contents
①	<b>Set item No.</b>	Parameter No.
②	<b>Designation</b>	Name of parameter
③	<b>Range &amp; contents of data</b>	Indicates the range available for setting in the case of numeral type. Indicates selectable contents in the case of selection type.
④	<b>Ref. page</b>	Indicates the reference page for the setting method.
⑤	<b>Unit</b>	Indicates the unit of set value. Indicates the set item No. in the case of specified by other set item No.
⑥	<b>Description</b>	Indicates the contents of parameter.

## A. Integration group

Set item No.	Designation	Range & contents of data		Ref. page	Unit	Description																		
A 1	Unit of integration	<table><tr><th>Contents of setting</th><th>Unit of integration</th></tr><tr><td>0</td><td>0.1m L</td></tr><tr><td>1</td><td>1m L</td></tr><tr><td>2</td><td>0.01 L</td></tr><tr><td>3</td><td>0.1 L</td></tr><tr><td>4</td><td>1 L</td></tr><tr><td>5</td><td>0.01m<sup>3</sup></td></tr><tr><td>6</td><td>0.1m<sup>3</sup></td></tr><tr><td>7</td><td>1m<sup>3</sup></td></tr></table>		Contents of setting	Unit of integration	0	0.1m L	1	1m L	2	0.01 L	3	0.1 L	4	1 L	5	0.01m <sup>3</sup>	6	0.1m <sup>3</sup>	7	1m <sup>3</sup>	7-5		Unit of indication in MODE 1, 4, and unit of batch volume for batch type  The value available for setting varies depending on the nominal size. Nominal size: Value available for setting  025A0:3~7 (0.1L~1m <sup>3</sup> ) 025B0:3~7 (0.1L~1m <sup>3</sup> ) 040A0:3~7 (0.1L~1m <sup>3</sup> ) 040B0:4~7 (1L~1m <sup>3</sup> ) 050A0:4~7 (1L~1m <sup>3</sup> ) 050B0:4~7 (1L~1m <sup>3</sup> )
Contents of setting	Unit of integration																							
0	0.1m L																							
1	1m L																							
2	0.01 L																							
3	0.1 L																							
4	1 L																							
5	0.01m <sup>3</sup>																							
6	0.1m <sup>3</sup>																							
7	1m <sup>3</sup>																							

## b. Momentary flow rate group

Set item No.	Designation	Range & contents of data	Ref. page	Unit	Description																		
b 1	Switching of momentary flow rate	<table><tr><th>Contents of setting</th><th>Unit of flow rate</th></tr><tr><td>0</td><td>/h</td></tr><tr><td>1</td><td>/min</td></tr></table>	Contents of setting	Unit of flow rate	0	/h	1	/min	7-6		Indication unit of momentary flow rate												
Contents of setting	Unit of flow rate																						
0	/h																						
1	/min																						
b 2	Unit of flow rate (/h)	<table><tr><th>Contents of setting</th><th>Unit of flow rate</th></tr><tr><td>0</td><td>0.1 mL/h</td></tr><tr><td>1</td><td>1 mL/h</td></tr><tr><td>2</td><td>0.01 L/h</td></tr><tr><td>3</td><td>0.1 L/h</td></tr><tr><td>4</td><td>1 L/h</td></tr><tr><td>5</td><td>0.01 m³/h</td></tr><tr><td>6</td><td>0.1 m³/h</td></tr><tr><td>7</td><td>1 m³/h</td></tr></table>	Contents of setting	Unit of flow rate	0	0.1 mL/h	1	1 mL/h	2	0.01 L/h	3	0.1 L/h	4	1 L/h	5	0.01 m³/h	6	0.1 m³/h	7	1 m³/h	7-6	b1	<p>Setting is possible when b1: Switching of momentary flow rate is at "0".</p> <p>The value available for setting varies depending on the nominal size. Nominal size: Value available for setting</p> <p>025A0: 4~6 (1L~0.1m³) 025B0: 4~6 (1L~0.1m³) 040A0: 4~6 (1L~0.1m³) 040B0: 5~7 (0.01m³~1m³) 050A0: 5~7 (0.01m³~1m³) 050B0: 5~7 (0.01m³~1m³)</p>
Contents of setting	Unit of flow rate																						
0	0.1 mL/h																						
1	1 mL/h																						
2	0.01 L/h																						
3	0.1 L/h																						
4	1 L/h																						
5	0.01 m³/h																						
6	0.1 m³/h																						
7	1 m³/h																						
b 3	Unit of flow rate (/min)	<table><tr><th>Contents of setting</th><th>Unit of flow rate</th></tr><tr><td>0</td><td>0.1 mL/min</td></tr><tr><td>1</td><td>1 mL/min</td></tr><tr><td>2</td><td>0.01 L/min</td></tr><tr><td>3</td><td>0.1 L/min</td></tr><tr><td>4</td><td>1 L/min</td></tr><tr><td>5</td><td>0.01m³/min</td></tr><tr><td>6</td><td>0.1 m³/min</td></tr><tr><td>7</td><td>1 m³/min</td></tr></table>	Contents of setting	Unit of flow rate	0	0.1 mL/min	1	1 mL/min	2	0.01 L/min	3	0.1 L/min	4	1 L/min	5	0.01m³/min	6	0.1 m³/min	7	1 m³/min	7-6	b1	<p>Setting is possible when b1: Switching of momentary flow rate is at "1".</p> <p>The value available for setting varies depending on the nominal size. Nominal size: Value available for setting</p> <p>025A0: 2~4 (0.01L~1L) 025B0: 2~4 (0.01L~1L) 040A0: 2~4 (0.01L~1L) 040B0: 3~5 (0.1L~0.01m³) 050A0: 3~5 (0.1L~0.01m³) 050B0: 3~5 (0.1L~0.01m³)</p>
Contents of setting	Unit of flow rate																						
0	0.1 mL/min																						
1	1 mL/min																						
2	0.01 L/min																						
3	0.1 L/min																						
4	1 L/min																						
5	0.01m³/min																						
6	0.1 m³/min																						
7	1 m³/min																						
b 4	0 ~ 100% span	00000 : 19999	7-10	b1 b2 (b3)	Display span in MODE 5, and analog span for analog output type																		
b 5	Low cutoff	00.0 : 99.9	7-14	%	Flow rate stop value Set % value of b4: 0 ~ 100% span.																		
b 6	Upper limit alarm value	More than lower limit alarm value : 99999	7-8	b1 b2 (b3)																			
b 7	Lower limit alarm value	00000 : Less than upper limit alarm value	7-8	b1 b2 (b3)																			



## C. Output group

Set item No.	Designation	Range & contents of data		Ref. page	Unit	Description																		
C 1	Contents of SIG1 output	<table><tr><th>Contents of setting</th><th>Contents of output</th></tr><tr><td>---</td><td>No output</td></tr><tr><td>Un5</td><td>Unitless pulse</td></tr><tr><td>5L</td><td>Unit pulse</td></tr><tr><td>hL</td><td>Upper limit alarm</td></tr><tr><td>Lo</td><td>Lower limit alarm</td></tr><tr><td>hL</td><td>Upper &amp; lower limit alarm</td></tr><tr><td>bAt</td><td>Battery alarm</td></tr></table>	Contents of setting	Contents of output	---	No output	Un5	Unitless pulse	5L	Unit pulse	hL	Upper limit alarm	Lo	Lower limit alarm	hL	Upper & lower limit alarm	bAt	Battery alarm	7-11			bAt can be set only when equipped with a battery.		
Contents of setting	Contents of output																							
---	No output																							
Un5	Unitless pulse																							
5L	Unit pulse																							
hL	Upper limit alarm																							
Lo	Lower limit alarm																							
hL	Upper & lower limit alarm																							
bAt	Battery alarm																							
C 2	Contents of SIG2 output	<table><tr><th>Contents of setting</th><th>Contents of output</th></tr><tr><td>---</td><td>No output</td></tr><tr><td>Un5</td><td>Unitless pulse</td></tr><tr><td>5L</td><td>Unit pulse</td></tr><tr><td>hL</td><td>Upper limit alarm</td></tr><tr><td>Lo</td><td>Lower limit alarm</td></tr><tr><td>hL</td><td>Upper &amp; lower limit alarm</td></tr><tr><td>bAt</td><td>Battery alarm</td></tr></table>	Contents of setting	Contents of output	---	No output	Un5	Unitless pulse	5L	Unit pulse	hL	Upper limit alarm	Lo	Lower limit alarm	hL	Upper & lower limit alarm	bAt	Battery alarm	7-11			bAt can be set only when equipped with a battery.		
Contents of setting	Contents of output																							
---	No output																							
Un5	Unitless pulse																							
5L	Unit pulse																							
hL	Upper limit alarm																							
Lo	Lower limit alarm																							
hL	Upper & lower limit alarm																							
bAt	Battery alarm																							
C 3	Pulse unit	<table><tr><th>Contents of setting</th><th>Pulse unit</th></tr><tr><td>0</td><td>0.1 mL/p</td></tr><tr><td>1</td><td>1 mL/p</td></tr><tr><td>2</td><td>0.01 L/p</td></tr><tr><td>3</td><td>0.1 L/p</td></tr><tr><td>4</td><td>1 L/p</td></tr><tr><td>5</td><td>0.01 m³/p</td></tr><tr><td>6</td><td>0.1 m³/p</td></tr><tr><td>7</td><td>1 m³/p</td></tr></table>	Contents of setting	Pulse unit	0	0.1 mL/p	1	1 mL/p	2	0.01 L/p	3	0.1 L/p	4	1 L/p	5	0.01 m³/p	6	0.1 m³/p	7	1 m³/p	7-12			The value available for setting varies depending on the nominal size.  Nominal size: Value available for setting 025A0:3~7 (0.1L~1m³) 025B0:3~7 (0.1L~1m³) 040A0:3~7 (0.1L~1m³) 040B0:4~7 (1L~1m³) 050A0:4~7 (1L~1m³) 050B0:4~7 (1L~1m³)
Contents of setting	Pulse unit																							
0	0.1 mL/p																							
1	1 mL/p																							
2	0.01 L/p																							
3	0.1 L/p																							
4	1 L/p																							
5	0.01 m³/p																							
6	0.1 m³/p																							
7	1 m³/p																							
C 5	SIG 1 pulse width adjustment (indication only)	0.5 : 200.0		9-8	ms	Valid when external power is supplied.																		
C 6	SIG 2 pulse width adjustment (indication only)	0.5 : 200.0		9-8	ms	Valid when external power is supplied.																		

## d. Batch group

Set item No.	Designation	Range & contents of data		Ref. page	Unit	Description						
d 1	Simple batch ON / FF	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>On</td><td>Use simple batch</td></tr><tr><td>OFF</td><td>Not use simple batch</td></tr></table>	Contents of setting	Contents of action	On	Use simple batch	OFF	Not use simple batch		7-20		
Contents of setting	Contents of action											
On	Use simple batch											
OFF	Not use simple batch											
d 2	Automatic reset ON/OFF	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>On</td><td>Auto reset system</td></tr><tr><td>OFF</td><td>Manual reset system</td></tr></table>	Contents of setting	Contents of action	On	Auto reset system	OFF	Manual reset system		7-21		
Contents of setting	Contents of action											
On	Auto reset system											
OFF	Manual reset system											
d 3	Overshoot count ON / OFF	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>On</td><td>Overshoot count system</td></tr><tr><td>OFF</td><td>Overshoot no-count system</td></tr></table>	Contents of setting	Contents of action	On	Overshoot count system	OFF	Overshoot no-count system		7-22		
Contents of setting	Contents of action											
On	Overshoot count system											
OFF	Overshoot no-count system											
d 4	Overshoot correcting value	00 : 99		7-23	A1							

## E. Processing group

Set item No.	Designation	Range & contents of data	Ref. page	Unit	Description						
E 1	Viscosity (decimal)	0. 0 : 9. 9			Do not change the default settings.						
E 2	Viscosity (index)	0 : 6									
E 5	Momentary flow rate indication updating time	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>0</td><td>At every calculation</td></tr><tr><td>1</td><td>At every second</td></tr></table>	Contents of setting	Contents of action	0	At every calculation	1	At every second	7-15		
Contents of setting	Contents of action										
0	At every calculation										
1	At every second										
E 6	Alarm updating time	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>0</td><td>At every calculation</td></tr><tr><td>1</td><td>At every second</td></tr></table>	Contents of setting	Contents of action	0	At every calculation	1	At every second	7-16		
Contents of setting	Contents of action										
0	At every calculation										
1	At every second										
E 7	Reading of FLASH		7-19								
E 8	Writing in FLASH		7-17								
E 9	Hibernation mode	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>0</td><td>No hibernate</td></tr><tr><td>1~9</td><td>1 to 9 (hours)</td></tr></table>	Contents of setting	Contents of action	0	No hibernate	1~9	1 to 9 (hours)	7-13		
Contents of setting	Contents of action										
0	No hibernate										
1~9	1 to 9 (hours)										

## **F. Check group**

Set item No.	Designation	Range & contents of data	Ref. page	Unit	Description						
F 1	Software version (indication only)										
F 2	Meter factor (indication only)	0.0000 : 1.0000			Current value of meter factor (unitless pulse output unit)						
F 3	Simulated output ON / OFF	<table border="1"><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>On</td><td>Output simulation signal</td></tr><tr><td>OFF</td><td>Not output simulation signal</td></tr></table>	Contents of setting	Contents of action	On	Output simulation signal	OFF	Not output simulation signal	9-2		
Contents of setting	Contents of action										
On	Output simulation signal										
OFF	Not output simulation signal										
F 4	Simulated output value	000.0 : 199.9	9-2	%	Set % value of b4: 0 ~ 100%						
F 5	Serial number display (indication only)										

## G. Service group

Set item No..	Designation	Range & contents of data	Ref. page	Unit	Description						
G 1	Segment check (indication only)	<div>OVER HIGH LOW BATT SENS COMM</div> <div>88888888</div> <div>MODE1 MODE2 MODE3 MODE4 MODE5</div>			Lighting of all segments						
G 2	Input check										
G 3	Totalize while non batch operation	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>On</td><td>Totalize</td></tr><tr><td>OFF</td><td>No totalize</td></tr></table>	Contents of setting	Contents of action	On	Totalize	OFF	No totalize			Initial value : OFF (No totalize) While simple batch is active, integration and momentary flow rate processing is performed or not.
Contents of setting	Contents of action										
On	Totalize										
OFF	No totalize										
G 4	Battery alarm (Only when external power is supplied)	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>On</td><td>Output alarm</td></tr><tr><td>OFF</td><td>Not output alarm</td></tr></table>	Contents of setting	Contents of action	On	Output alarm	OFF	Not output alarm			
Contents of setting	Contents of action										
On	Output alarm										
OFF	Not output alarm										
G 5	Integrated flow	00000000 : 99999999		A1	Contents of indication in MODE 1						
G 6	Resettable integrated flow	00000000 : 99999999		A1	Contents of indication in MODE 4 (during no-batch processing)						
G 7	Serial number										
G 8	Momentary flow averaging	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>0</td><td>No averaging</td></tr><tr><td>1 : 9</td><td>Averaging</td></tr></table>	Contents of setting	Contents of action	0	No averaging	1 : 9	Averaging	9-2		Initial value : 0 (No averaging)
Contents of setting	Contents of action										
0	No averaging										
1 : 9	Averaging										
G 9	Momentary flow Measurement mode selection	<table><tr><th>Contents of setting</th><th>Contents of action</th></tr><tr><td>0</td><td>First 1 rotation of rotor flow measurement</td></tr><tr><td>1</td><td>First pulse period flow measurement</td></tr></table>	Contents of setting	Contents of action	0	First 1 rotation of rotor flow measurement	1	First pulse period flow measurement			Initial value : 0 (First 1 rotation of rotor flow measurement)
Contents of setting	Contents of action										
0	First 1 rotation of rotor flow measurement										
1	First pulse period flow measurement										
G10	Pulse check										
G11	Analog output check										

## **DATA B: SEGMENT CHARACTERS CORRESPONDENCE LIST**

This section presents the characters on the segment indicating unit used for this flow meter.

Contents of indication	Corresponding character
-	-
0	0 ( O )
1	1
2	2
3	3
4	4
5	5 ( S )
6	6
7	7
8	8
9	9
A	A
b	b
C	C
c	c
d	d
E	E
F	F

Contents of indication	Corresponding character
G	G
H	H ( X )
h	h
i	i
J	J
L	L
n	n
O	O ( 0 )
o	o
P	P
q	q
r	r
S	S ( 5 )
t	t
U	U
u	v ( u )
X	X ( H )
Y	Y

## **Product warranty**

The products and specifications described in this document are subject to change (including specification change and production termination) without notice for product improvement. When you consider using or ordering the product described in this document, please contact us as appropriate to confirm that the information described in this document is the latest.

This product is manufactured and inspected under the appropriate quality control as an industrial instrument, and delivered. However, failure may occur due to an unexpected cause. When this product is used for process control that may cause serious problems in terms of safety, safety can be achieved by duplicating the control system, such as adding equipment that performs the same function in addition to this product. Acceptance inspection will be conducted promptly for the purchased product, and with regard to the handling before or during the acceptance inspection of this product, please give due consideration to management and maintenance.

### **Warranty period**

The warranty period for this product is one year after delivery.

The warranty period shall start from the date of the form (delivery note, installation commission confirmation, receipt).

### **Scope of warranty**

If a failure or defect is found in our product during this warranty period due to our responsibility, we will provide replacement products, or replace or repair the defect part free of charge.

However, if any failure or damage falls under any of the following articles, this warranty does not apply.

1. When it originates in the specification and the standard specified you, your handling method, etc.
2. In the case where the change in structure, performance, specifications, etc which carried out after purchase or delivery, and in which we are not involved.
3. When it is due to a phenomenon that cannot be foreseen by the technology that has been put into practical use on or before the time of purchase or contract.
4. When used out of range of conditions and environment described in catalogs and specifications.
5. In case where this product is used incorporated into your device and the damage could be avoided by the device function which should have in general concept.
6. Due to natural disasters or force majeure
7. Consumables such as batteries and relays, and optional items such as cables.

In addition, the warranty mentioned here is limited to the warranty of the product purchased or delivered, and the damage caused by the failure of this product or damage is excluded.

# **NITTOSEIKO CO.,LTD.**

## **Control System Division**

30,Nogamibata,Nobu-cho, Ayabe, Kyoto 623-0041,Japan

TEL : +81-773-43-3151(Domestic Operation)

+81-6-6105-5086(Global Sales Section)

FAX : +81-773-43-3155

URL : <https://www.nittoseiko.co.jp/en.html>